

# **RADIO CONNECT R & GO**








# CONTENTS

<b>Central display</b> .....	<b>3</b>
General information .....	3
Audio/Multimedia .....	10
Phone .....	16
System settings .....	25
<b>Table display</b> .....	<b>30</b>
General information .....	30
Audio/Multimedia .....	36
Phone .....	43
System settings .....	53
<b>Digital display</b> .....	<b>58</b>
General information .....	58
Audio/Multimedia .....	66
Phone .....	73
System settings .....	82
<b>R&amp;Go</b> .....	<b>87</b>
IntroductionR&Go .....	87
R&Go General description.....	88
R&Go Navigation function .....	92
R&Go Vehicle function.....	93
R&Go Multimedia function.....	95
R&Go Telephone function.....	97
R&Go Adjusting the settings.....	99
<b>Settings</b> .....	<b>101</b>
Using voice recognition .....	101
Wireless charger.....	102
Operating faults .....	104

# GENERAL INFORMATION


## Display

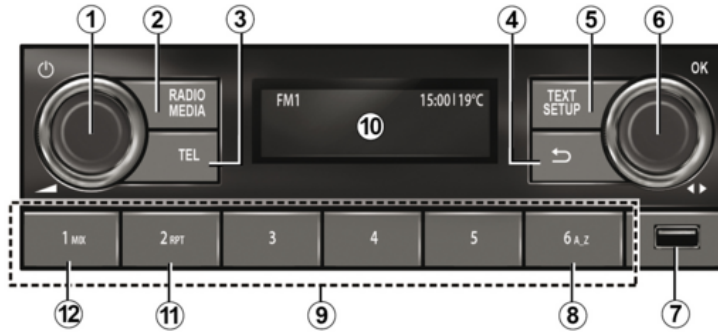


# GENERAL INFORMATION

1

## Steering column controls

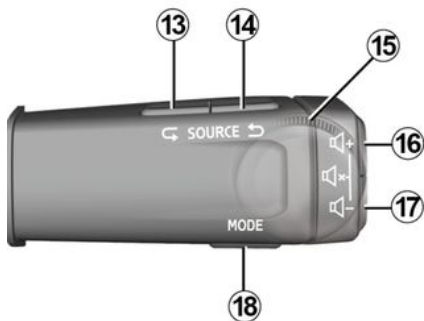



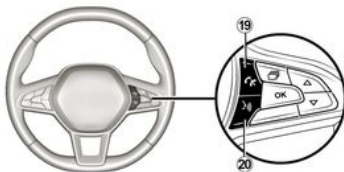




## Steering wheel control



 





# GENERAL INFORMATION

## Introduction to the controls

		AUDIO/MEDIA function	TELEPHONE function
1		<ul style="list-style-type: none"> <li>– <b>Press:</b> to switch the car radio on/off.</li> <li>– <b>Rotate:</b> to adjust the sound volume.</li> </ul>	
2		<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to automatically play the source selected among: FM→ DR→ AM→ USB→ BT Audio.</li> <li>– <b>Press and hold:</b> to update the list of available radio stations (FM and DR).</li> </ul>	
3			<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to access the "Phone" menu; call the number displayed; accept an incoming call.</li> <li>– <b>Press and hold:</b> to reject an incoming call.</li> </ul>
4		<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to return to the previous menu; cancel the current action or go up a level in the audio playlist directory (media).</li> <li>– <b>Press and hold:</b> to return to the main menu.</li> </ul>	
5		<ul style="list-style-type: none"> <li>– <b>Brief press:</b> "Setup" function: access the custom settings menu.</li> <li>– <b>Press and hold:</b> "Text" function: FM, DR: display the additional information broadcast by radio stations in relation to their programmes or other information.</li> </ul>	<ul style="list-style-type: none"> <li>– <b>Press and hold:</b> "Text" function: display the connected phone.</li> </ul>
6	 + 	<b>Panel control knob:</b> <ul style="list-style-type: none"> <li>– <b>Press:</b> confirm an action; display the list of radio stations (favourites + list); display the audio playlist (media).</li> <li>– <b>Rotation:</b> DR: change the station; FM and AM: manual search; BT and USB: change the track.</li> </ul>	<b>Panel control knob:</b> <ul style="list-style-type: none"> <li>– <b>Press:</b> to answer/end a call or select call options.</li> <li>– <b>Rotate:</b> to scroll through the phonebook and call log.</li> </ul>

# GENERAL INFORMATION

 
 
 
 
 
 
 
1

		AUDIO/MEDIA function	TELEPHONE function
7		USB socket for an MP3 player or auxiliary audio sources.	To access telephone content without a Bluetooth® connection (depending on the telephone).
8		Search by letter in the music lists/search by letter in the contacts list.	
9		<ul style="list-style-type: none"> <li>– <b>Press briefly (1-6):</b> to recall a stored radio station.</li> <li>– <b>Press and hold (1-6):</b> to store a radio station.</li> </ul>	
10		Car radio operation control display screen.	
11		RPT: repeat playback of the audio playlist.	
12		MIX: shuffle playback of the audio playlist.	
13 and 14		Scroll through to select an audio source FM→ DR→ AM→ USB→ BT Audio.	
15		<p><b>Steering column control knob:</b></p> <p><b>Rotate:</b></p> <ul style="list-style-type: none"> <li>– FM and AM: to perform an automatic/quick search;</li> <li>– DR, BT Audio and USB: change the radio station/music track;</li> <li>– Up/Down.</li> </ul>	<p><b>Steering column control knob:</b></p> <p><b>Rotate:</b> scroll through suggested actions (end call, put call on hold, switch to hands-free mode, display digital keypad).</p>



## GENERAL INFORMATION

1

		AUDIO/MEDIA function	TELEPHONE function
16 and 17	 	Progressively adjust the volume of the audio source currently playing.	
16 + 17	 + 	<ul style="list-style-type: none"> <li>– Radio mute on/off.</li> <li>– Pause/play a track played by a Bluetooth® portable audio player or USB audio player.</li> </ul>	
18		<p><b>With the audio medias in USB/Bluetooth :</b></p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> repeat playback "Repeat";</li> <li>– <b>Press and hold:</b> shuffle playback "Mix".</li> </ul>	<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> confirm a selection from the phonebook or call log.</li> <li>– <b>Press and hold:</b> to return (in most menus).</li> </ul>
19			<p><b>Incoming call:</b></p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to answer the call;</li> <li>– <b>Press and hold:</b> to end/reject the call.</li> </ul> <p><b>Call in progress/outgoing:</b></p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to end the call.</li> </ul>
20		<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to activate voice recognition.</li> <li>– <b>Press and hold:</b> to deactivate voice recognition.</li> </ul>	

# GENERAL INFORMATION

1

## General description

### Introduction

The audio system includes the following functions:

- FM and AM radio;
- terrestrial digital radio DR;
- management of auxiliary audio sources USB;
- Bluetooth® hands-free phone system.

### Radio function

The radio can be used to listen to radio stations on the following bands: FM (frequency modulation) and AM (amplitude modulation).

The DR system (digital terrestrial radio in DAB format, DAB+, T-DMB) improves sound reproduction and enables you to access the "Radio-text" stored radio text information by scrolling the text to display:

- news updates;
- sports news;
- ...



Your hands-free telephone system is only intended to facilitate communication by reducing the risk factors, but does not remove them completely. Always comply with the laws of the country in which you are travelling.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency messages.

### Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- pair up to six phones;
- make/receive/reject a call;
- transfer the telephone or SIM card phonebook contact list SIM (depending on the phone);
- view the history of calls made using the system (depending on the phone);
- call voicemail.

### Auxiliary audio function

You can listen to your portable digital audio player directly through your

vehicle's speakers. There are several ways to connect your portable audio player, depending on the type of device you have:


- Bluetooth® connection;
- USB port.

For more information on the list of compatible devices, contact an authorised dealer.

### Bluetooth® function

This function enables the audio system to recognise and control your portable digital audio player or mobile telephone via Bluetooth® pairing.

### Display screens

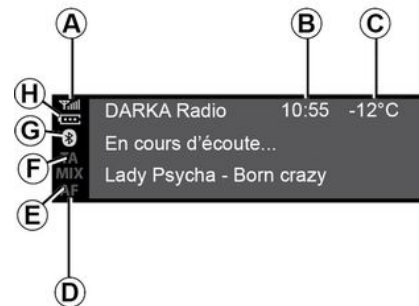


**A.** Information on the telephone network status.

## GENERAL INFORMATION


- B.** Current time.
- C.** Exterior temperature.
- D.** Alternative frequency.
- E.** Shuffle tracks from an audio source.
- F.** Traffic information.
- G.** Connection information Bluetooth®.
- H.** Information on the telephone battery level.


### Operation

#### On and off

Press briefly on  to switch on your audio system.


The audio system can be used with the vehicle ignition off. It will operate


for several minutes. Press  to keep it on for a few more minutes. Switch off the audio system by press-


ing briefly on . The system only displays the time.

#### Choosing the source

Scroll through the various audio sources by repeatedly pressing on

. When scrolling, the audio sources appear in the following order: FM→ DR→ AM→ USB→ Bluetooth®. You can also select the audio source

by pressing on .




When you switch on your radio, the media that was last played should resume. If not, press briefly on .

When you connect a USB media source while the audio system is switched on then the source will automatically switch to the new media and start to play its content.

When you connect a Bluetooth® media source while the audio system is on, if the audio source playing was already Bluetooth® then the media content will switch and start to play automatically on the audio system.

**Note:** press on  or  to display the telephone menu.

 

#### Volume

 

Adjust the volume by rotating the  on the panel, or by pressing on  or .


The display shows "Volume" followed by the current setting value.



#### Mute

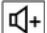Simultaneously press on  and . The " MUTE " message is displayed on the screen.

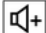Briefly press on  or  to continue listening to the current audio source.

You can also activate/deactivate the mute function by rotating the  on the panel.


# AUDIO/MULTIMEDIA

1

## Listen to the radio

### Select a radio band

Select the desired waveband among FM, AM or DR (terrestrial digital radio)

by repeatedly pressing .

### Selecting a radio station

This mode allows you to search for stations manually, scrolling through the

frequencies by rotating  on the

panel or by pressing  on the steering column to start an automatic search.

## Station memory



This operating mode allows you to listen to your pre-set radio stations.

Select a band (FM, DR, AM, etc.), then select a radio station using the modes described above.

To store a station, press and hold one of buttons 1 to 6, depending on your selection, until you hear a beep.

You can save up to six stations per waveband.

To recall a stored station, briefly press one of buttons 1 to 6 according to your selection.


The list of "Favourites" stations is displayed at the top of the list of stations.

To return to the list of stations, press



## Selecting a radio station


In the AM band, the stations can be browsed by their radio frequency and in the FM or DR band the list of stations can be browsed.

Select the desired band (FM, AM or DR) by repeatedly pressing on .


This list can include up to 100 radio stations stored the last time the list was updated.

Rotate the  on the panel to scroll through the radio stations in the FM/DR list.

## Display radio text

To display the "Radio text", press and on .

If no information is provided, "No message" is displayed on the screen.

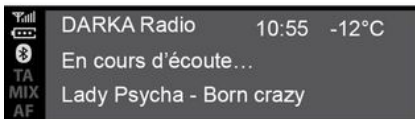


## Text information "Radio text" ( FM )

Some FM radio stations broadcast text information related to the program playing (e.g. the title of a song, artist

name etc.) Press  to scroll through the "Radio text".



**Note:** this information is only available


for some radio stations. Use  on

the panel or  on the steering column to scroll through the information according to the display style.

## "Radio text" information and news (DR)

This feature allows access to text information recorded on some radio stations. You can scroll through the text to display news updates (economy, politics, health, weather, sports, etc.) using

 on the panel or  on the steering column.

Press  again to return to the radio station currently playing.

## Programme guide (DR)

This feature enables your audio system to display the station's upcoming programs for the day.

**Note:** this information is only available for the selected station's next three time slots.

## Auxiliary audio sources

### USB connection

#### Connect

Connect the plug of the MP3 player, portable digital audio player or USB drive to the USB port.

Once the device is connected, the track will be displayed automatically.

## AUDIO/MULTIMEDIA

### 1 Using the external audio source

Once your external audio source is connected, its contents can be accessed via the multimedia system menus.

#### Note:

- some formats may not be recognised by the system;
- the USB drive in use must be FAT32 formatted and have a maximum capacity of 500 GB.

Once the external audio source is connected, the first audio track will start to play automatically.


The system automatically restarts the last song played if the external audio player was previously connected to the audio system.



The audio system stores playlists identical to those on your external audio player.

If the external audio source has files, playlists and folders in its directory, the display and playback order on the screen will be as follows:



- « Folders » ;
- « Songs » ;
- « Playlists ».


To access the contents of your external audio source via your audio system:

– press  on the front panel to return to the playlist;



– rotate  on the front panel or  on the steering column to scroll through the tracks;

Then, to modify the current playlist:

– press  on the panel to display the current playlist, then press  to display the folders or selection criteria.

Press  to return to the previous folder;

or

– press  on the panel and confirm by pressing  to select the folder/playlist or to play the selected track.

#### Charging using the USB port

Once the USB plug of your portable digital audio player or phone is connected to the USB port of the audio system, the battery can be charged or the charge level maintained during use.

**Note:** some devices do not recharge or maintain the battery charge level while they are connected to the USB port on the audio system.

#### Bluetooth® audio playback


In order to use your Bluetooth® portable digital audio device, you must pair it to the vehicle upon first use. Refer to the "Pairing, unpairing a phone" section.

Pairing enables the audio system to recognise and store a Bluetooth® portable digital audio device.

#### Note:

- if your portable digital audio player Bluetooth® is equipped with telephone functions **b** and an audio player **a**, pairing one of these functions will automatically involve pairing the other;
- the number of functions which can be accessed depends on the type of portable digital audio player and its compatibility with the audio system.

# AUDIO/MULTIMEDIA

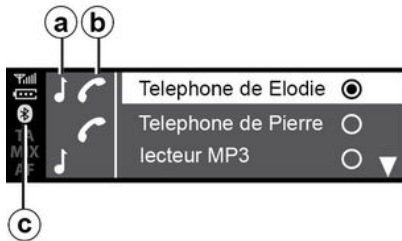

## Connect

Your portable digital audio player must be connected to the audio system via Bluetooth® **c** or USB in order for you to access all of its features.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player while you are driving.

**Risk of displacement in the event of sudden braking or in the event of an impact.**

For a device already paired, perform the following operations:

- enable the portable digital audio player Bluetooth® connection and make it visible to other devices (for more information please see the user manual for your portable digital audio player);
- select the Bluetooth® audio source


by pressing  or .

## Use



Your portable digital audio player must be connected to the audio system to enable access to all of its features.

 

**Note:** the portable digital audio player cannot be connected to the audio system unless it has already been paired.

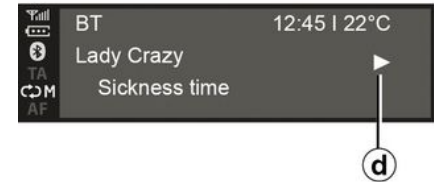Once the Bluetooth® portable digital audio player is connected, you can control it via your audio system.




Once the external audio source is connected, the first audio track will start to play automatically. The "PLAY" symbol **d** is displayed.

Rotate  on the panel or  on the steering column to move to the previous or next track.

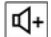Press  and  simultaneously to "PAUSE" **f** the audio track (press again to resume playback).

# AUDIO/MULTIMEDIA

1

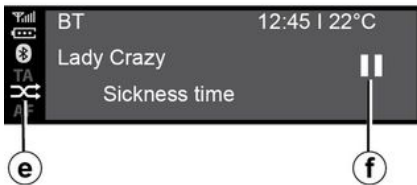

## Note:

- in some cases, you may need to refer to the user manual for your device in order to finalise the connection procedure;
- The number of accessible functions varies depending on the type of portable player and its compatibility with the audio system.

## Shuffle "MIX"

Press **1 MIX** or press and hold **MODE** to shuffle all the tracks in the folder.


The "MIX " indicator light **e** appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.

Press **1 MIX** again or press and hold **MODE** to deactivate the shuffle playback: the "MIX " indicator light **e** disappears.

Turning off the audio system deactivates the shuffle function.

**Note:** on a Bluetooth® device that is connected to the audio system, the shuffle applies to the current playlist. Change the folder/playlist to start the random playback.


## Repeat "RPT"

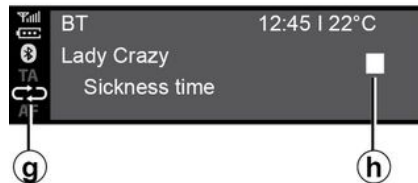

This function can be used to repeat the track that is currently playing.

Press **2 RPT** or press briefly on **MODE** to activate the repeat function. The " RPT " warning light **g** appears on the screen.

Press again on **2 RPT** or press briefly on **MODE** to deactivate the repeat function, the " RPT " warning light **g** will disappear.

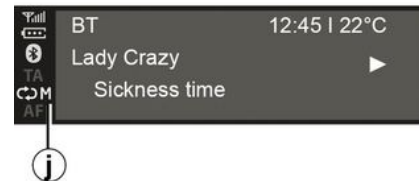

**Note:** if the shuffle function is activated, this will be automatically deactivated when the repeat function is activated, the " MIX " warning light **e** will disappear and the " RPT " warning light **g** will appear.



## AUDIO/MULTIMEDIA

 
You can enable the " RPT " and " MIX " functions simultaneously: the warning light *j* will appear on the screen.


### Play mode



The playback mode is shown by the following symbols:

- « PLAY " *d*;
- "PAUSE" *f*;
- « STOP " *h*.
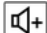
### Pause

Simultaneously press on  and

 to mute the sound or pause the audio track. The symbol *f* appears on the screen.

Press again on  and  simultaneously to activate the sound again or to play the audio track. The symbol *f* disappears from the screen and the warning light *d* appears.

This function is also deactivated if you change the volume or source, or if an automatic news bulletin comes on.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

# PHONE

1

## Pairing/unpairing a phone

### Bluetooth® connection



To activate the audio system's Bluetooth® function:

- press **TEL** or to access the "Phone" menu;
- select "BT ON/OFF" using the on the steering column control or on the panel, then press **OK** or **MODE** to confirm;

– select "YES" using on the steering column control or on the panel, then press **OK** or **MODE** to confirm.

### Pairing a phone

To use your hands-free system, pair your Bluetooth® mobile phone with the vehicle. Check that your phone's Bluetooth® function is activated and set its status to "visible".


Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to six phones, but only one can be connected at a time.


Pairing can be performed from the audio system or from your phone.

Your audio system and phone must both be switched on.

**Note:** if you pair a new phone while another phone is already connected to the audio system, it will be disconnected and replaced by the new paired phone.

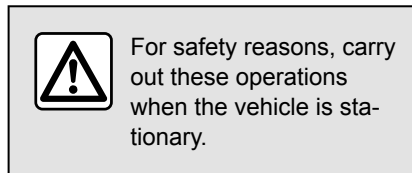

For safety reasons, carry out these operations when the vehicle is stationary.

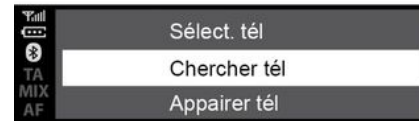



### Pairing a Bluetooth® phone with the audio system via the audio system

 
 
This method allows you to make a Bluetooth® search from the audio system.

To pair a phone, carry out the following operations:

- activate Bluetooth®;
- press **TEL** or to access the "Phone" menu;



# PHONE

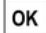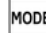– select "Search for a phone" using  on the steering column or 

on the front panel, then  or  to confirm.

The search for Bluetooth® devices in the vicinity will begin (this search may take up to approximately 60 seconds.)

Select the telephone that you wish to

pair by rotating  on the steering column or  on the panel, then

press  to confirm.

From your Bluetooth® device, accept the pairing request.

When the "Connected" message is displayed on the audio system screen, the Bluetooth® device is automatically stored and connected to the vehicle.

Your device is then visible in the list of recognised phones which can also be accessed in the "Select a phone" sub-menu.

If the pairing has not been successful after 60 seconds, the "Pairing failed" message appears. Repeat these operations to carry out the desired action. Please refer to your telephone's user guide for further information.



**Note:** depending on your phone, it may be useful to accept the transfer of your phonebook and call history.


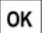 
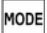 
## Pairing a Bluetooth® phone with the audio system via your phone

This method allows you to make a Bluetooth® search from your phone.

To pair your phone, carry out the following operations:

– activate Bluetooth®;

– press  or  to access the "Phone" menu;

– select "Pair phone" using  on the front panel, then  or  to confirm.

The "Enter the code: XXXXXX" message appears on the audio system screen and a 60 seconds countdown starts.

The audio system is then visible to other Bluetooth® devices for approximately 60 seconds.

Search for the audio system using your telephone, then select it (see your telephone user manual) or accept the pairing code with your telephone.

The "MY CAR connected" or "R&Go Multimédia" message is displayed on the audio system screen to confirm

that your telephone is paired and connected with your audio system.

The "R&Go Multimédia" message is displayed on the screen only if the R&Go application connects to the audio system and if the application is installed on your smartphone.

If pairing fails, the audio system display returns to the "Phone" menu.

If the maximum limit of phones paired with the audio system is reached, you need to unpair an existing phone before pairing a new one (refer to the information on "Unpairing a phone" in this section).







 
 


Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



# PHONE

## 1 Unpairing a telephone

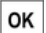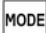

Unpairing enables you to delete a phone from the hands-free telephone system memory:

- press  or  to access the "Phone" menu;
- select the "Delete a phone" menu using the  on the steering column control or  on the panel, then press  or  to confirm;
- select "YES" using  on the steering column control or  on the

panel, then press  or  to confirm.

A message is displayed on the audio system screen asking you to confirm your choice (as shown in the illustration).

If six phones are already stored, the system offers to delete one of the devices. By selecting "YES", you will be redirected to the "Delete a phone" menu.

## Connecting/disconnecting a phone

### Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

A telephone cannot be connected to the hands-free telephone system unless it has previously been paired.

Please refer to the information on "Pairing a phone" in the "Pairing/unpairing a phone" section.

**Note:** your phone's Bluetooth® connection must be activated and set to "visible".

### Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

**Note:** the last phone to have been connected is given priority.

Searching will continue until a paired telephone is found (this may take several minutes).

**Note:** for more information on the list of compatible phones, please contact an approved dealer:

- you can use automatic telephone connection with the ignition switched on. You may need to activate the automatic Bluetooth® connection function on your hands-free phone system. To do this, refer to your phone user manual;
- when reconnecting, and when two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system.

**Note:** if a call is already in progress when your hands-free telephone system is connected, the telephone will connect automatically and the conversation audio will switch to the vehicle speakers.

# PHONE



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



For safety reasons, carry out these operations when the vehicle is stationary.



## Manual connection (changing the phone connected)

- press **TEL** or to access the "Phone" menu;
- rotate the on the steering column control or on the panel until you reach the "Select a phone" menu, then **OK** to confirm.



The list of phones already paired is displayed.  
Select the phone that which you wish to connect using on the steering

column or on the panel, then

press **OK** to confirm.

A message will appear to confirm that the telephone is connected.

**Note:** if a phone is already connected, when selecting another phone from the list of phones already paired, the existing connection is automatically replaced by that of the new phone requested.

## Connection failure


If connection fails, check that:

- your phone is switched on;
- your phone battery is not flat;
- your phone has already been paired to the hands-free telephone system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

**Note:** using your hands-free telephone system for prolonged periods will discharge your phone's battery more quickly.

# PHONE

## 1 Telephone information

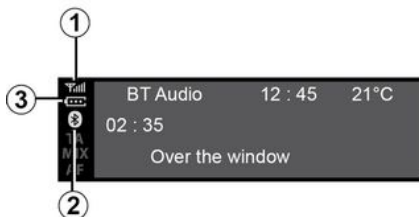

Once connected, the audio system displays telephone-related information:

- the telephone network status **1**;
- the telephone battery level **2**;
- the type of connection to the multimedia system **3**.

## Disconnect a phone



To disconnect your telephone, you can:

- deactivate the Bluetooth® function on your audio system;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a phone" in the "Pairing, unpairing a phone" section.

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

### Note:

- if the phone is switched off it will also be disconnected;

– If a call is in progress when the telephone is disconnected, the call will be automatically transferred to your telephone.






To disable your smartphone's Bluetooth®, refer to your phone's user guide.


To unpair and delete the Bluetooth® phone, see the information under "Unpairing a phone" in the "Pairing, unpairing a phone" section.

## Making/receiving a call

### Calling a contact from the telephone directory

When pairing a phone, its phonebook is automatically uploaded into the audio system (depending on the phone).

 
- press on  or  to access the "Phone" menu;
- select "Phonebook" using  on the steering column control or  on the panel, then  to confirm.



**Note:** you can call a number or contact by pressing briefly on  (see the "Using voice recognition" section).

# PHONE

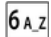


From the "Phonebook" menu you can search for a contact by name. To do this:


– press  to display the digital keyboard;


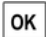 
– use  on the panel or  on the steering column control to scroll through the letters of the alphabet;

– when you have selected the desired


letter, press  on the panel to confirm;


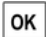 
– select the desired contact using

 on the steering column control or

 on the panel, then press  to view the saved contact number(s);

– select the desired number using

 on the steering column control or

 on the panel, then press  to confirm and make the call.

**Note:** to return to the previous screen,


press .





It is recommended that you stop your vehicle before entering a number or searching for a contact.

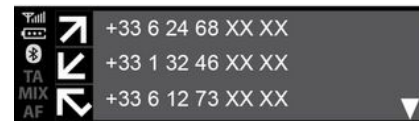

## Call a contact from your call log history

1





To display the call history:

– press  or press briefly on  to access the "Phone" menu;


– select "Calls" by pressing  on the steering column control or  on


the panel, then press  to confirm;

– Select the contact or number you want to call by pressing  on the panel or  on the steering wheel

# PHONE


1



control, then press on **TEL**, **OK** or  to make the call.



To recall the last number dialed, press and hold on **TEL** or .


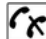 
## Making a call by dialling a number


To make a call by dialling the number:

– press **TEL** or press briefly on  to access the "Phone" menu;

– select "Dial" by pressing  on the steering column control or  on the panel, then press **OK** to confirm;

– select each digit by pressing  on the steering column control or  on the panel, then press **OK** to confirm;

– once the number has been dialled, press **TEL**,  on the panel or  to make the call.

You can recall the last number dialed by pressing and holding on **TEL** or .

## Receiving a call

When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider).





If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.





If the caller's number cannot be displayed, the "Private number" message is displayed on the audio system screen.



It is recommended that you stop your vehicle before entering a number or searching for a contact.







To accept an incoming call, press **TEL** or . You can also select  using  on the steering column control or  on the panel, then **OK** to confirm and accept the incoming call.

To reject a call, press and hold **TEL** or . You can also select  using  on the steering column control or  on the panel, then press **OK** to confirm and reject the call.

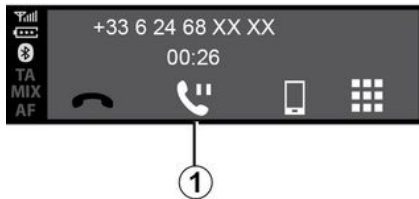


# PHONE




To put an incoming call on hold, select **1** by pressing  on the steering column control or  on the panel, then press  to confirm and put the incoming call on hold.

## Receiving a second call




When receiving a second call, the second caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider). You can:


- accept the incoming call by selecting  ;

- reject the incoming call by selecting  ;
- put an incoming call on hold by selecting **1**.



## During a call


You can:

- adjust the volume by rotating  on the audio system panel or by pressing  or  on the steering column control;




- hang up by pressing .



You can also:

- accept the incoming call/resume a call placed on hold by selecting  ;
- hang up by selecting  during the conversation;
- put a call on hold by selecting **1**.

 The system allows managing call waiting when your phone is connected (depending on your plan).




Rotate  on the steering column or  on the panel, then  to confirm. You can:


- accept the incoming call/resume a call placed on hold by selecting  ;
- hang up by selecting  during the conversation;

# PHONE


1

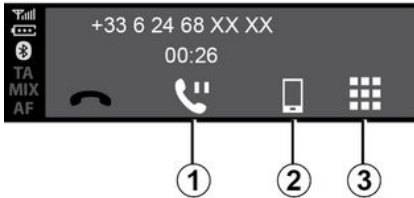

- put a call on hold by selecting **1**;
- switch the conversation from your phone to your audio system by selecting **2**;
- control the keypad of your phone from the audio system by selecting **3**;

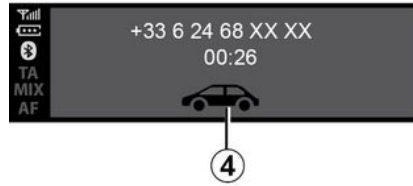





 
 
- switch the conversation from your phone to your audio system by selecting **4**.

 The system allows managing call waiting when your phone is connected (depending on your plan).

# SYSTEM SETTINGS

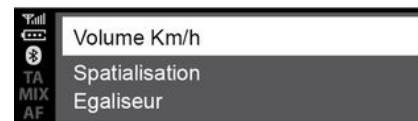 

## Audio settings



Display the settings menu by pressing . Select "Audio settings" by pressing  on the panel or  on the steering column, then  or  to confirm. The following settings are available:

- "Equaliser";
- "Spatialisation";
- "Volume mph (km/h)";
- « Bass boost » ;
- "Reset".



### "Equaliser"

 
 
Select "Equaliser", then press  or  on the steering column to access the different sections in the following order:

- « Bass » ;
- « Middle » ;
- « Treble ».

### "Spatialisation" (sound distribution)

- "Balance" (left/right sound distribution);
- depending on the vehicle;
- "Fader" (front/rear sound distribution).

 

You can change the value of each setting by pressing  on the panel or  on the steering column control.

Press  or  to confirm and return to the previous selection.

To exit the current menu, press .

### "Volume sensitive to speed"

The volume of the audio system varies in relation to the vehicle speed.

Go to the "Audio settings" menu then confirm "Volume mph (km/h)" by pressing  or .

## SYSTEM SETTINGS


1 To reach the desired setting, select one of the following:

- « OFF » ;
- "Very low";
- « Low » ;
- « Middle » ;
- "High";
- « Very high ».



### « Bass boost »

The "Bass boost" function can be used to increase the bass when listening at low volume.

To activate/deactivate this function, se-

lect "ON / OFF" using  on the

steering column control or  on the

panel, then press  or  to confirm.

### "Default audio"

Display the "Audio settings" and select "Default" then "Reset".

Select "YES" or "NO".



All the audio settings return to their default values.

## Setting the time

 
 


This function allows you to set the time.

Display the settings menu by pressing

. Select "Clock" by pressing 


on the steering column control or 

on the panel, then press  or  to confirm. The following settings are available:

- "Settings": set the hours and minutes;
- "Format": set the time display format to " 12h " or " 24h ».

 
## Radio settings

Display the settings menu by pressing

briefly on , then select "Radio Set-

tings" by pressing  on the steering

column control or  on the panel,

then press  to confirm. The available functions are as follows:

- « TA » ;
- « AF » ;
- "DR alerts";
- "Update FM list";
- "Update DR list";
- "Priority to DR".

### « AF »

The frequency of an FM station changes according to the geographical area. Some stations use the RDS system, mainly for automatic retuning of the AF frequency while the vehicle is moving.



For safety reasons, carry out any adjustments while the vehicle is stationary.


### « TA »

## SYSTEM SETTINGS

When this feature is activated, your audio system searches for and automatically plays traffic bulletins as new reports are broadcast by some "FM" or "DR" radio stations.


To activate or deactivate this function:



– display the settings menu by pressing

and holding on , then press


 to confirm;



– select "Radio settings" by pressing

 on the panel or on the steering

column, then  or  to confirm;

– select "TA" by pressing  on the

panel or  on the steering column,

then  or  to confirm;

– select "ON" or "OFF" to activate or deactivate the "TA" ».

**Note:** this feature is not available when using the AM band.

Select the "Traffic information" function then select another audio source if needed.


### "DR alerts" (news bulletins)

When this function is activated, it is possible to automatically listen to news as it is broadcast by certain DR radio stations.


To activate or deactivate this function:




– display the settings menu by pressing

and holding on , then press


 to confirm;

– select "Radio settings" by pressing

 on the steering column control or

 on the panel, then  or  to confirm;

– select "TA" by pressing  on the

panel or  on the steering column,

then  or  to confirm;

– select "ON" or "OFF" to activate or deactivate the "TA" function.


If you select other sources, when a new broadcast of the selected bulletin type is made, it will interrupt the other sources.


### "Update the "FM" list

This feature allows you to perform an update of all FM stations in the area where you are located.



– Display the settings menu by pressing

briefly on , select "Radio" by

rotating  on the panel, then press

 to confirm;

– select "Update FM list" by rotating

 on the panel, then press  to confirm.

Automatic updating of the FM stations in the area will begin. The "Update FM list" is displayed.

When the update is complete, the "Update FM list" message appears on the screen.

### Note:

– if another source is selected, the radio list update FM FM continues in the background;

– while listening to FM, you can also update the FM radio list by pressing


and holding on .

 
### "Update the "DR" list

Use this function to update all DR stations in the area where you are located:

– display the settings menu by pressing


 
briefly on , select "Radio" by

rotating  on the panel, then press

 to confirm;

# SYSTEM SETTINGS

1

– select "Update DR list" by rotating  on the panel, then press  to confirm.

Automatic updating of the list of terrestrial digital radio stations in your area begins. The "Update DR list" message is displayed.

When the automatic frequency scan is finished, the "DR list updated" message is displayed.

**Note:** while listening to FM radio, you can also update the list of DR radio stations by pressing and holding on



## "Simulcast"

Depending on the country, this function switches from a DR station to the equivalent FM station if the digital signal is lost.

If the "FM/DR simulcast" is activated, there may be lag of a few seconds when switching from FM to DR or from DR to FM. A change in volume may occur.

The system will automatically switch back to DR as soon as the digital signal is received.

**Note:** during the simulcast, the source name is replaced by "DR (FM)".

## "Priority to DR"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DR station to obtain better sound quality.

**Note:** when priority is given to DR, the source name is replaced by "FM (DR)".

## Selecting a language

This function allows you to change the language of the audio system.

Access the "Language" section by


pressing ,

select the desired language by pressing  on the panel

or  on the steering column, then

 or  to confirm.



Press once on  to return to the previous menu.

## Software version

Display the settings menu by pressing



then scroll down to "software version". The software version or "Soft-



ware" message is displayed on the screen.

 
 
To update the software, please contact an approved dealer.

## "BT settings" (Bluetooth®)

Access the "Phone" menu:

– press  ;

– select the "BT settings" section by pressing  on the panel or  on

the steering column, then  or  to confirm.

The following settings are available:




- "Volume": adjust the volume of the ringtone or call audio;
- "Ringtones": activate the vehicle ringtone or the ringtone from the phone.



For safety reasons, carry out any adjustments while the vehicle is stationary.

To adjust the ringtone volume while a Bluetooth® phone is connected to the audio system, select "Volume" by



## SYSTEM SETTINGS


pressing  on the panel or  on the steering column, then  to confirm.

A new sub-menu appears:


- "Ringtones";
- "Calls".


Select one of the two sections by

pressing  on the panel or  on

the steering column, then  to confirm.

To activate the ringtone on the vehicle or Bluetooth® connected phone, select "Ringtones" by rotating and pressing



 on the audio system panel or by

 
using  on the steering column control.

A new sub-menu appears:

- « Vehicle » ;
- « Phone ».

Select one of the two sections by

pressing  on the panel or  on

the steering column, then  to confirm.

## Display radio text

Display the radio text menu by press-

ing and holding on . The audio system displays "Text available" on the screen.

The radio text display can contain a maximum of 64 characters.

**Note:** if the radio station that is currently playing cannot display radio text, the audio system screen displays "No messages".




For safety reasons, carry out any adjustments while the vehicle is stationary.


# GENERAL INFORMATION

## Display


2

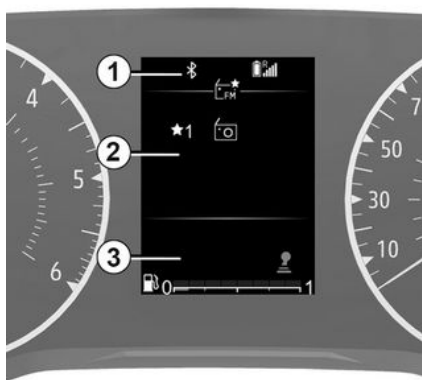

## Steering column controls

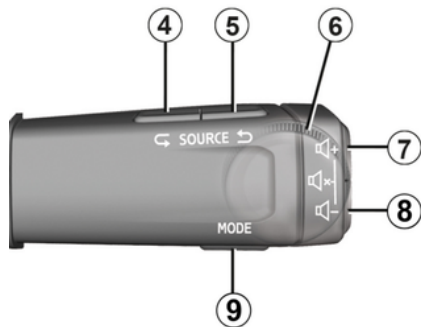



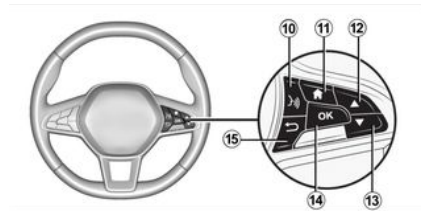 


## Steering column controls



 
 



 



# GENERAL INFORMATION

## Introduction to the controls

		AUDIO/MEDIA function	TELEPHONE function
1		Information zone: time, connectivity, telephone information, exterior temperature.	
2		Worlds display zone (Vehicle, Radio, Media, Phone, Settings).	
3		Vehicle trip computer point.	
4 and 5		Scroll through to select an audio source FM→ DR→ AM→ USB→ BT Audio.	
6		<b>Steering column control knob:</b> <b>Rotate:</b> <ul style="list-style-type: none"> <li>– Radio, BT Audio and USB: change the radio station/music track;</li> <li>– Up/Down.</li> </ul>	<b>Steering column control knob:</b> <b>Rotate:</b> <ul style="list-style-type: none"> <li>– scroll through suggested actions (end call, put call on hold, switch to hands-free mode, display digital keypad) except while a call is in progress;</li> <li>– scroll through the phonebook quick search menu.</li> </ul>
7 and 8	 and 	Progressively adjust the volume of the audio source currently playing.	
7 + 8		Mute the audio source currently playing.	

## GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
9		<p>Change the mode for displaying and searching for radio stations FM - DR - AM:</p> <ul style="list-style-type: none"> <li>– list mode (search the list for FM/DR radio stations);</li> <li>– manual mode (search FM/AM radio stations by frequency).</li> </ul> <p>With the audio media in USB/Bluetooth®:</p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> repeat playback "Repeat";</li> <li>– <b>Press and hold:</b> shuffle playback "Mix".</li> </ul>	
10		<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to activate telephone voice recognition.</li> <li>– <b>Press and hold:</b> to deactivate telephone voice recognition.</li> </ul>	
11		Access/return to the main menu.	
12 and 13	 and 	<p>Scroll through worlds/menus, lists and directories:</p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to search manually;</li> <li>– <b>Press and hold:</b> to open the quick search directory menu.</li> </ul> <p>Media playing:</p> <ul style="list-style-type: none"> <li>– <b>Press and hold:</b> to fast forward or rewind.</li> </ul>	
14		Select/confirm a function or current playlist, select an item or confirm an action, store a radio station.	
15		<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to return to the previous level in the world/menu; to cancel the current action or to go up a level in the audio playlist directory (media).</li> <li>– <b>Press and hold:</b> to return to the main menu.</li> </ul>	

# GENERAL INFORMATION

## General description

### Display screens

- A.** Current time.
- B.** Bluetooth® telephone connection information.
- C.** Information on the telephone battery level.
- D.** Information on the telephone network status.
- E.** Exterior temperature.
- F.** Fuel level.
- G.** Audio information (audio source, song title etc.).


### Worlds display area

Your system contains several worlds:

- « Vehicle » ;
- « Radio » ;
- "Media";
- « Phone » ;
- « Settings » ;
- ...

**Note:** the availability of Worlds depends on the equipment.

You can access the different worlds at

any time using the  button on the steering wheel.



### Introduction

The audio system includes the following functions:

- FM and AM radio;
- terrestrial digital radio DR;
- management of USB auxiliary audio sources;
- Bluetooth® hands-free phone system.

### Radio function

The radio can be used to listen to radio stations on the following bands: FM (frequency modulation) and AM (amplitude modulation).

The DR system (digital terrestrial radio in DAB format, DAB+, T-DMB) improves sound reproduction and enables you to access the "Radio text" stored radio text information by scrolling the text to display:

- news updates;
- sports news;
- ...



Your hands-free telephone system is only intended to facilitate communication by reducing the risk factors, but does not remove them completely. Always comply with the laws of the country in which you are travelling.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency messages.

### Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- pair up to six phones;
- make/receive/reject a call;

## GENERAL INFORMATION

- transfer the telephone or SIM card phonebook contact list SIM (depending on the phone);
- view the history of calls made using the system (depending on the phone);
- call voicemail.

### Auxiliary audio function

You can listen to your portable digital audio player directly through your vehicle's speakers. There are several ways to connect your portable audio player, depending on the type(s) of device you have:

- Bluetooth® connection;
- USB port.


For more information on the list of compatible devices, contact an authorised dealer.



### Bluetooth® function

This function enables the audio system to recognise and control your portable digital audio player or mobile telephone via Bluetooth® pairing.

### Operation

#### On and off

Briefly press on  to switch on your audio system.






The audio system can be used with the vehicle ignition off. It will operate for several minutes. Briefly press  to keep it on for a few more minutes. Switch off the audio system by pressing and holding on . The radio system display is shown in the illustration while switched off or in "Vehicle" mode with the sound muted.

### Choosing the source

Scroll through the various audio sources by repeatedly pressing on



. When scrolling, the audio sources appear in the following order: FM→ DR→ AM→ USB→ Bluetooth®. You can also select the audio source from the "Media" world.


Press , select the "Media" world by pressing the  on the steering column control,  or , then  to confirm. Select the audio source.

 
 
 
When you connect a USB media source while the audio system is switched on then the source will auto-

matically switch to the new media and start to play its content.

When you connect a Bluetooth® media source while the audio system is on, if the audio source playing was already Bluetooth® then the media content will switch and start to play automatically on the audio system.


### Volume

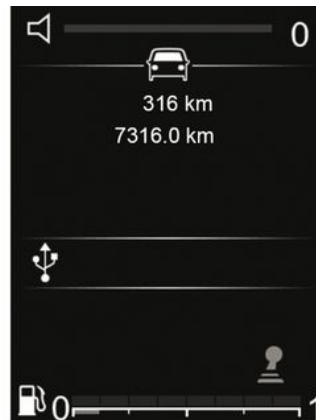



 
Adjust the volume by pressing on  or . By briefly pressing on  the volume increases a notch. The display shows "Volume" followed by the current setting value.

### Mute

## GENERAL INFORMATION


Press briefly on  to mute the sound.

Press briefly again on the buttons 

,  or  to continue listening to the current audio source.

# AUDIO/MULTIMEDIA

## Listen to the radio

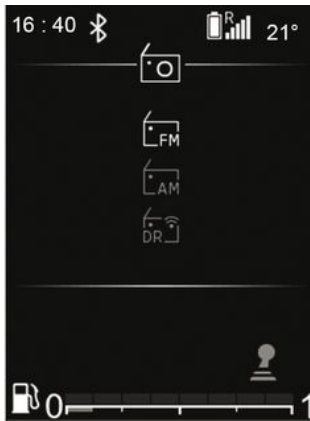

### Select a radio band

To select the desired band among FM, AM or DR (Digital Terrestrial Radio),

press on to access the "Radio" world, then select the band by pressing or , or press on . While listening to a radio station, press on to access the band selection screen.

### Selecting a radio station

There are several ways to select and search for a radio station:

– "list mode" **1** available in DR and FM;



– "manual mode" **2** available in AM and FM.

### "List mode"

This mode allows you to search for available stations by scanning the list of stations in alphabetical order, then by frequency (for stations broadcast


unnamed) by using or , then

to confirm.

The radio station you stop at in the list will automatically play shortly afterwards.

To return to the list of stations, press

or browse using on the steering column control, or .

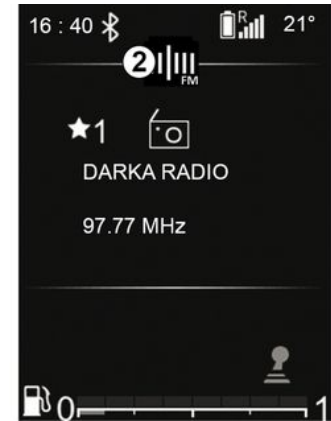

To get the most recent list of stations, update the radio list.

For more information, see the "Update FM list" and "Update DR list" in this section.

### "Manual mode"

Manual mode allows you to search for stations by browsing the frequencies in FM and AM:

## AUDIO/MULTIMEDIA

– scroll to the higher frequencies using



on the steering column control or



– scroll to the lower frequencies using



on the steering column control or




By pressing on  or  :

 
– press briefly: to search by frequency step;

– press and hold: to search for an available station automatically.

### Radio/media information

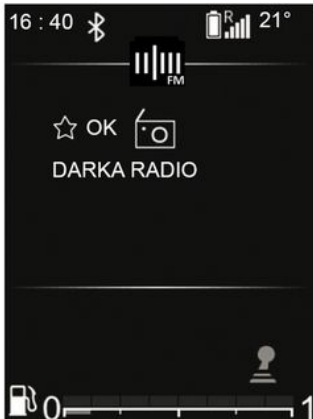

 
This function displays the information on the frequency that you wish to see on the screen (see above). It is displayed automatically after a moment or

when you press .


### Station memory




You can store up to six stations so that will be permanently shown at the top of the list of stations.

Select a band (FM, DR), then select a radio station using the modes described above.

To store the station, press and hold on  from the currently playing list and select the position in the Favourites. A beep confirms that the station is saved as a favourite.

By browsing through the list from the beginning, you will still be able to find your "Favourite" stations in the zone entitled – MEM---. Next comes the full list of stations sorted by alphabetical order in the zone entitled – LIST --.

The radio station you stop at will automatically play shortly afterwards. To return to the list of stations, press .


or browse using  on the steering column control,  or .

# AUDIO/MULTIMEDIA


## Selecting a station



2

In the AM band, the stations can be browsed by their radio frequency and in the FM or DR band the list of stations can be browsed.

Select the desired band (FM, DR or AM) by repeatedly pressing on .

This list can include up to 100 radio stations stored the last time the list was updated.

Use  on the steering column con-

trol,  or  to scroll through the radio stations in the FM, DR list.



# AUDIO/MULTIMEDIA

## Media audio sources

Your audio system is equipped with a USB port as well as a Bluetooth® connection which can be used to connect external audio sources.

**Note:** the auxiliary audio source formats include MP3, WMA and AAC.

## USB connection

### Connect

Connect the plug of the MP3 player, portable digital audio player or USB drive to the USB port.

Once the device is connected, the track will be displayed automatically.


### Use




Once the external audio source is connected, the first audio track will start to play automatically.

The audio system automatically restarts the last track played if the external audio player was previously connected to the audio system.



Once your external audio source is connected, its contents can be accessed via the multimedia system menus. It stores playlists identical to those of your external audio player.


To access the contents of your external audio source via your audio system:

– press  to return to the playlist;  
or

– rotate the  on the steering column control or press  or  to scroll through the tracks.

Then, to modify the current playlist:

– press  to display the folders or selection criteria. Press again on  to return to the previous folder;  
or

– press  to select the folder, playlist or to listen to the selected track.

### Charging using the USB port

Once the USB plug of your portable digital audio player or telephone is connected to the USB port of your audio system (located near the driver's position in the passenger compartment) it will be possible to charge or maintain the battery level during use.

**Note:** some devices do not recharge or maintain the battery charge level while they are connected to the USB port on the audio system.

## Bluetooth® audio playback

In order to use your Bluetooth® portable digital audio device, you must pair it to the vehicle upon first use. Refer to the "Pairing, unpairing a phone" section.


Pairing enables the audio system to recognise and store a Bluetooth® portable digital audio device.

### Note:

– if your Bluetooth® digital device is equipped with telephone and portable digital audio player functions, pairing one of these functions will automatically pair the other;  
– the number of functions which can be accessed depends on the type of portable digital audio player and its compatibility with the audio system.

## AUDIO/MULTIMEDIA

2

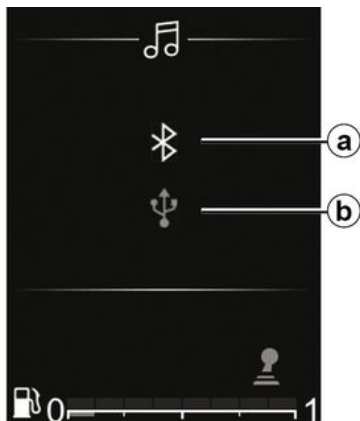

### Connecting to the vehicle

Your portable digital audio device must be connected to the audio system via Bluetooth® **a** or USB **b** in order for you to access all of its features.



Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

For a device already paired, perform the following operations:

- activate the radio Bluetooth® connection;
- enable the telephone or portable digital audio device Bluetooth® connection and make it visible to other devices (refer to the user manual for your device);
- select the audio source Bluetooth®

by repeatedly pressing on  ;

– select the external audio player or the telephone to be connected via Bluetooth® among those detected by the multimedia system.

### Use

Your portable digital audio player must be connected to the audio system to enable access to all of its features.


**Note:** the portable digital audio player cannot be connected to the audio system unless it has already been paired.






Once the Bluetooth® portable digital audio player is connected, you can operate it via your audio system.

Once the external audio source is connected **c**, the first audio track will start to play automatically **d**.

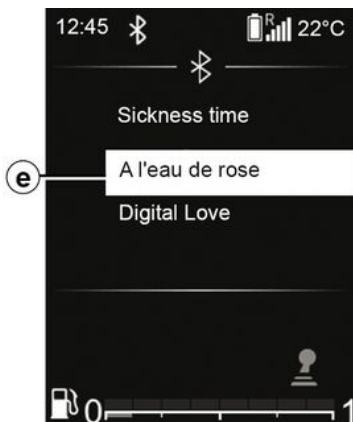 
## AUDIO/MULTIMEDIA



Press  on the steering wheel control to return to the playlist **e**.

Press  or  to scroll through the tracks.

To return to the playback screen **d**,

 
press  or wait a moment until the playlist disappears automatically.

**Note:** the number of accessible functions

 
depends on the type of portable digital audio device and its compatibility with the audio system.

### Shuffle "MIX"



Press and hold on  to shuffle all of the tracks in the folder.

The " MIX " warning light **f** appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.


Press and hold again on  to deactivate the shuffle function: the " MIX " warning light **f** will disappear.

 
Turning off the audio system deactivates the shuffle function.


### Repeat "RPT"



This function enables you to repeat a playlist.

Press briefly on  to enable the repeat function across the entire playlist. The " RPT " warning light **g** appears on the screen.

Press briefly again on  to repeat the current track: "1" **h** will appear on the symbol " RPT ».

Press briefly again on  to deactivate the repeat function, the " RPT " warning light **g** will disappear.

## AUDIO/MULTIMEDIA


You can also use these playback options: from the main menu, select the "Media" world then the USB source.


2



Only operate the portable digital audio player when traffic conditions permit.

Store the portable digital audio player safely while driving (risk of it being thrown in the event of sudden braking or impact).

Press briefly on  to mute the sound or pause the audio track.

Press briefly again on  or perform an action on the volume bar to unmute or play the audio track.

The audio system sound is automatically activated when changing sources or during bulletin broadcasts.

### Mute the sound/Pause




 






# PHONE

## Pairing/unpairing a phone

### Bluetooth® connection

To activate the audio system's Bluetooth® function:

- press  to access the main menu;
- select the "Settings" world then the "Phone settings" menu followed by "Bluetooth®" using the  or ,
- then  to confirm;
- select "YES" using  or ,
- then confirm by pressing . The Bluetooth® symbol will then appear continuously in the status bar  on the screen.



For safety reasons, carry out these operations when the vehicle is stationary.

### Pairing a phone

To use your hands-free system, pair your Bluetooth® mobile phone with the

vehicle. Check that your phone's Bluetooth® function is activated and set its status to "visible".

Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to six phones, but only one can be connected at a time.

Pairing can be performed either via the audio system or via your phone.

Your audio system and phone must both be switched on.




 



**Note:** if you pair a new phone while another phone is already connected to the audio system, it will be disconnected and replaced by the new paired phone.




### Pairing a Bluetooth® phone with the audio system via the audio system



 
This method allows you to make a Bluetooth® search from the audio system.

To pair a phone, carry out the following operations:

- activate Bluetooth®;
  - press  to access the main menu;
  - select the "Settings" world, then the "Phone settings" menu using  or  then  to confirm;
  - select "Search a phone" using  or , then  to confirm.
- A message is displayed on the screen.

Press  to start the search.

The search for Bluetooth® devices in the vicinity will begin (this search may take up to 60 seconds.)

Select the phone that you wish to pair by pressing  or , then  to confirm.

From your Bluetooth® device, accept the pairing request.

## PHONE

When the "Name of connected Bluetooth device" message is displayed on the audio system screen, this indicates that the Bluetooth® device is automatically stored and connected to the vehicle.

Your device is then visible in the list of recognised phones which can also be accessed in the "Select a phone" sub-menu.

If the pairing has not been successful after 60 seconds, the "Pairing failed" message appears. Repeat these operations to carry out the desired action.


Please refer to your telephone's user guide for further information.


**Note:** depending on your phone, it may be useful to accept the transfer of your phonebook and call history.


 
### **Pairing a Bluetooth® phone with the audio system via your phone**



 
This method allows you to make a Bluetooth® search from your phone.

To pair your phone, carry out the following operations:

– press  to access the main menu;

– select the "Phone" world using 

or , then  to confirm;

– select "Pair a phone" using  or , then  to confirm.

The "Enter the code: XXXXXX" message appears on the audio system screen and a 60 seconds countdown starts.

The audio system is then visible to other Bluetooth® devices for approximately 60 seconds.

Search for the audio system using your telephone, then select it (see your telephone user manual) or accept the pairing code with your telephone.

The "MY CAR connected" or "R&Go Multimédia" message is displayed on the audio system screen to confirm that your telephone is paired and connected with your audio system.

The "R&Go Multimédia" message is displayed on the screen only if the R&Go application connects to the audio system and if the application is installed on your smartphone.

If pairing fails, the audio system display returns to the "Phone" world.





# PHONE

## Unpairing a telephone



 




 
Unpairing allows a phone to be deleted from the audio system memory.

To unpair and delete your phone from the audio system memory, perform the following steps:

- press  to access the main menu;
- select the "Settings" world, then "Phone settings" followed by "Delete phone" by pressing  or , then  to confirm;









 
- select the phone that which you wish to unpair using  or , then  to confirm;

- select "YES" using  or , then  to confirm.

If six phones are already stored, the system offers to delete one of the devices. By selecting "YES", you will be redirected to the "Delete a phone" menu.



To unpair and delete all phones from the audio system memory:

- press  to access the main menu;
- select the "Settings" menu, then "Phone settings" followed by "Delete all" by pressing  or , then  to confirm;
- select "YES" using  or , then  to confirm.

**Note:** all contacts in the phonebook and the call log in the synchronised audio system will be deleted.

## PHONE

2



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



# PHONE

## Connecting/disconnecting a phone

### Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

A telephone cannot be connected to the hands-free telephone system unless it has previously been paired.

Please refer to the information on "Pairing a phone" in the "Pairing/unpairing a phone" section.

**Note:** your phone's Bluetooth® connection must be activated and set to "visible".

### Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

**Note:** the last phone to have been connected is given priority.

Searching will continue until a paired telephone is found (this may take several minutes).

**Note:** for more information on the list of compatible phones, please contact an approved dealer:

– you can use automatic telephone connection with the ignition switched on. You may need to activate the auto-

matic Bluetooth® connection function on your hands-free phone system. To do this, refer to your phone user manual;

– when reconnecting, if two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system;


– if a call is already in progress when your hands-free telephone system is connected, the telephone will connect automatically and the conversation audio will switch to the vehicle speakers.








Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

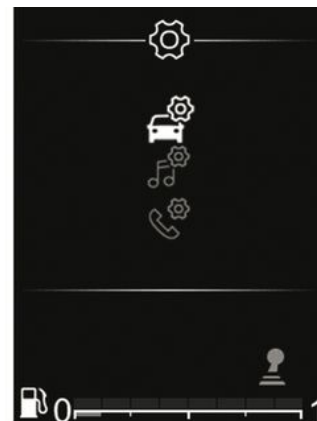


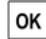 


For safety reasons, carry out these operations when the vehicle is stationary.



### Manual connection (changing the phone connected)

Press  to access the main menu, select the "Phone" world using  on the steering column,  or , then  to confirm.

Select the "Select phone" menu using  on the steering column,  or , then  to confirm.

## PHONE

2



The list of phones already paired is displayed.

Select the telephone that you wish to connect from the list using the control

knob on the steering column,  or

, then  to confirm.

A message will appear to confirm that the telephone is connected.

**Note:** if a phone is already connected when switching to another phone, the existing connection is automatically replaced by that of the new phone.

### Connection failure

If connection fails, check that:

- your phone is switched on;
- your phone battery is not flat;
- your phone has already been paired to the hands-free telephone system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

**Note:** using your hands-free telephone system for prolonged periods will discharge your phone's battery more quickly.

### Telephone information



Once connected, the audio system displays telephone-related information:

- the type of connection to the multimedia system **1**;

- the telephone battery level **2**;
- the telephone network status **3**.

### Disconnect a phone



To disconnect your telephone, you can:

- deactivate the Bluetooth® function on your audio system;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a phone" in the "Pairing, unpairing a phone" section.

If the phone is switched off, the phone will be disconnected.

## PHONE

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

**Note:** if a call is in progress when the phone is disconnected, the call will be automatically transferred to your phone.

To deactivate Bluetooth® on your audio system, refer to the information on the "Bluetooth® function" in the "General Description" section.

To disable your smartphone's Bluetooth®, refer to your phone's user guide.

To unpair and delete the Bluetooth® phone, see the information under "Unpairing a phone" in the "Pairing, unpairing a phone" section.

### Making, receiving a call

#### Calling a contact from the telephone directory

When pairing a phone, its phonebook is automatically uploaded into the audio system (depending on the phone).

 
You can also authorise automatic sharing of the phonebook and call logs so that the multimedia system transfers them automatically during your next pairings.

If access has not been authorised, a message is displayed on the audio

system screen asking you to authorise access to the phonebook.


If the multimedia system cannot find your telephone, please consult your telephone user manual.

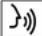


**Note:** you can call a number or contact



by briefly pressing  (please refer to the "Using voice recognition" section).



To search for a contact:



– press  to access the main menu, then select the "Phone" world




by pressing  or , then  to confirm;

– select "Contacts" using  or 

 
, then  to confirm.



 
From the "Contacts" menu, you can search for a contact by name. To do this:



 
– press and hold on  or  to activate the search;


– press  on the steering column,  or  to scroll through the letters of the alphabet;

– when you have selected the desired

letter, press  to confirm;

– select the desired contact by pressing  or , then press  to display the contact's stored number(s);

– select the desired number by pressing  or , then press  to confirm and start the call.

**Note:** to return to the previous screen, press .

## PHONE

2




 




 


 
It is recommended that you stop driving the vehicle before searching for a contact.

### Call a contact from your call log history




To display the call history:

- access the "Phone" world by pressing , then use  or  to select "Phone", then  to confirm;

- select "Calls" using  or ,
- then  to confirm;
- select the contact or the number to call by pressing  or ,
- then press  to start the call.

### Receiving a call

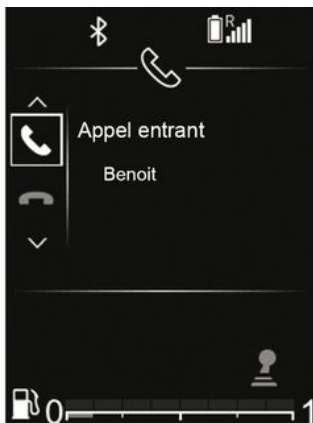


 


When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider).

If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.





If the caller's number cannot be displayed, the "Private number" message is displayed on the audio system screen.


To accept an incoming call:

- select the icon  using  or ,
  - then  to confirm;
- or

- press briefly on .

To reject an incoming call:

- select the icon  using  or ,
  - then  to confirm;
- or

- press and hold on .





It is recommended that you stop your vehicle before entering a number or searching for a contact.


# PHONE

## Receiving a second call






When receiving a second call, the second caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider). You can:



 
- accept the incoming call by selecting  ;
- reject the incoming call by selecting  ;
- put an incoming call on hold by selecting **1**.

To end a call during the conversation, press .



## During a call


You can:

- adjust the volume by pressing  or  ;
- end the call by pressing .

Press  or , then  to confirm.

You can also:

- accept the incoming call/resume a call placed on hold by selecting  ;
- end a call by selecting  during the conversation;
- put a call on hold by selecting **1**;
- select **2** to use the audio system keypad to enter the digits.

 The system allows managing call waiting when your phone is connected (depending on your plan).







# PHONE


## Using the keypad during a call

2



To use the audio system keypad during a call:

- select the audio system keypad using  or , then  to confirm;
- select the number or character using  or , then  to confirm your choice.

**Note:** to return to the previous screen, press .

# SYSTEM SETTINGS



From the main menu, browse by

pressing  or  until you reach the "Settings" world.


The following settings are available:


- « Vehicle » ;
- « Audio » ;
- « Phone ».





For safety reasons, carry out any adjustments while the vehicle is stationary.
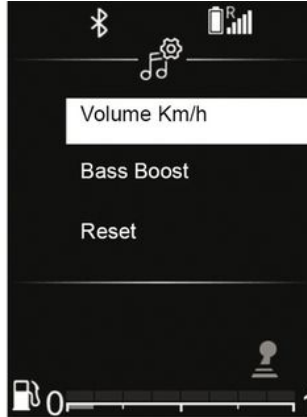
## Audio settings



From the main menu, use  or

 to browse to the "Settings" world, then select "Audio".



Select "Audio settings", then  to confirm.

The following settings are available:

- "Equaliser";
- "Spatialisation";
- "Volume mph (km/h)";
- « Bass boost » ;
- "Reset".



## "Equaliser"

Select "Equaliser", then press  or  to access the various items in the following order:



- « Bass » ;
- « Middle » ;
- « Treble ».


## "Spatialisation" (sound distribution)

The "Spatialisation" function to adjust the sound distribution in the passenger compartment:

- "Balance" (left/right sound distribution);
- depending on the vehicle;
- "Fader" (front/rear sound distribution).


## SYSTEM SETTINGS

You can change the value of each setting by pressing  or .

Press  to confirm and return to the previous selection.

### "Volume sensitive to speed"

The volume of the audio system varies in relation to the vehicle speed.

Access the "Audio settings" menu then select "Volume mph (km/h)" by pressing .



 
To reach the desired setting, select one of the following:



 
- « OFF » ;
- "Very low";
- « Low » ;
- « Middle » ;
- "High";
- « Very high ».



### « Bass boost »

The "Bass boost" function can be used to increase the bass when listening at low volume.

Access the "Audio settings" menu, then select "Bass boost" using  or , then  to confirm.



To activate/deactivate this function, select "ON" or "OFF" using  or , then  to confirm.

### "Default audio"


Display the "Audio settings" and select "Default" then "Reset".




 
Select "YES" or "NO".

All the audio settings return to their default values.

 Press the  button to return the previous menu.
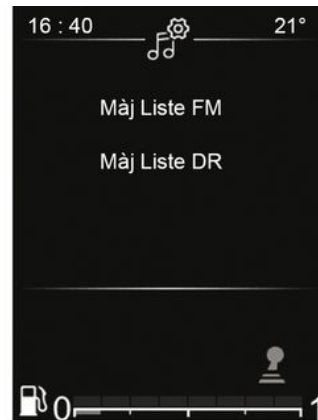
## Radio settings



Display the settings menu by pressing briefly on , select the "Settings" world, then "Audio settings" by pressing  or , then  to confirm. The available functions are as follows:





 
## SYSTEM SETTINGS

- "Update FM list";
- "Update DR list";
- "Simulcast";
- "Priority to DR";
- « TA » ;
- « AF ».

### "Update the "FM" list

This feature allows you to perform an update of all FM stations in the area where you are located.

From the "Settings world", select the "Radio settings" menu and then "Up-

date FM list" by pressing  or , then  to confirm.



 
Automatic updating of the FM stations in the area will begin. The "Update FM list" message is displayed on the instrument panel.

Once the update is complete, the "FM list updated" message is displayed on the screen.

### "Update the "DR" list

This feature allows you to perform an update of all DR stations in the area where you are located.


From the "Radio settings" menu, select

"Update DR list" by pressing  or , then  to confirm.

Automatic updating of the DR stations in the area will begin. The "Update DR list" message is displayed on the instrument panel.

Once the update is complete, the "DR list updated" message is displayed on the screen.

**Note:** if another source is selected

with , the FM or DR list continues to be updated in the background.

### "Simulcast"

Depending on the country, this function switches from a DR station to the equivalent FM station if the digital signal is lost.

If the "FM/DR simulcast" is activated, there may be lag of a few seconds when switching from FM to DR or from DR to FM. A change in volume may occur.

The system will automatically switch back to DR as soon as the digital signal is received.

**Note:** during the simulcast, the station name is preceded by " FM> »

### "Priority to DR"

Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the


equivalent DR station to obtain better sound quality.

 
**Note:** while DR is prioritised, the station name is preceded by " DR> ».


 
### « TA »

When this feature is activated, your audio system searches for and automatically plays traffic bulletins as new reports are broadcast by some "FM" or "DR" radio stations.

To activate or deactivate this function:

– from the "Settings" world, select "Radio settings" settings" by pressing 

on the steering column, then  to confirm;

– select "TA" by pressing  on the steering column, then  to confirm;  
– select "ON" or "OFF" to activate or deactivate the "TA" function.

### "AF" (automatic retuning AF)

The frequency of an FM station changes according to the geographical area.

Some stations use the RDS system, mainly for automatic retuning of "AF" while the vehicle is moving.

# SYSTEM SETTINGS

## Phone Settings

Use this function to adjust the settings of the telephone connected to the audio system.

From the main menu, browse by

pressing  or  until you reach the "Settings" world. Select "Phone


settings", then press  to confirm.

The following settings are available:

- "Search a phone";
- "Pair a phone";
- "Select a phone";
- "Delete a phone";
- "BT ON/OFF".

Please refer to the corresponding sections.



Press once on button  to return to the previous menu.



### "BT settings" (Bluetooth®)


From the main menu, browse by



pressing  or  until you reach the "Settings" world. Select "BT set-

tings", then  to confirm.

To activate the Bluetooth® audio system, select "ON" by pressing  or

, then  to confirm.

To deactivate the audio system Bluetooth®, select "OFF" by pressing 

or , then  to confirm.




## Selecting a language

Use this function to change the audio system display language on the instrument panel.

Display the settings menu by pressing



. Select "Vehicle Settings", "Language" and then choose the desired

language by pressing  or  by pressing  to confirm.




## Setting the time

This function allows you to set the time.


Display the settings menu by pressing





. Select "Vehicle menu", then



"Clock" using  or  and press  to confirm.

The "Clock" menu is displayed:

- press and hold  to access the Hours setting;

- adjust the hour by pressing  or , then wait for a moment until the selection automatically switches from the hour setting to the minute setting;

## SYSTEM SETTINGS

– set the minutes by pressing  or , then wait for a moment until the setting is automatically confirmed.



Depending on the brand and model of your telephone, the hands-free functions may be partially or fully incompatible with your vehicle's audio system.



For safety reasons, carry out any adjustments while the vehicle is stationary.


# GENERAL INFORMATION

## Display


3



## Steering column controls

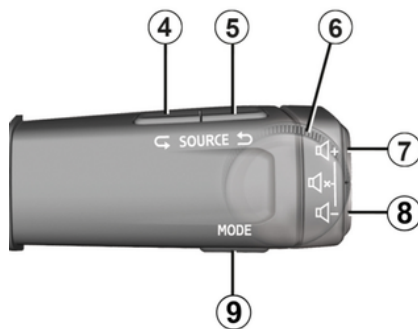

 


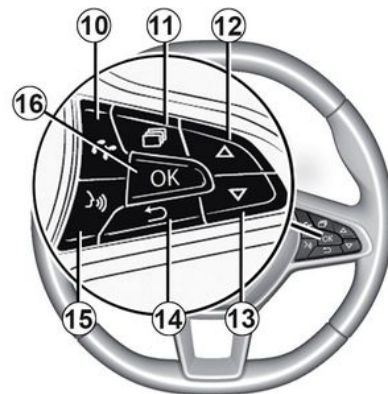

## Steering column controls

 
 





# GENERAL INFORMATION



 
## Introduction to the controls

		AUDIO/MEDIA function	TELEPHONE function
1		Information zone: time, connectivity, telephone information, exterior temperature.	
2		Worlds display zone (Vehicle, Radio, Media, Phone, Settings).	
3		Display area showing the world/menu currently in use.	
4 and 5		Scroll through the audio sources to select one of the following: FM→ DR→ AM→ USB→ Bluetooth®.	
6		<b>Steering column control knob:</b> <b>Rotate:</b> <ul style="list-style-type: none"> <li>– Radio, BT Audio and Bluetooth®: change the radio station/music track;</li> <li>– Up/Down.</li> </ul>	<b>Steering column control knob:</b> <b>Rotate:</b> <ul style="list-style-type: none"> <li>– scroll through suggested actions (end call, put call on hold, switch to hands-free mode, display digital keypad) except while a call is in progress;</li> <li>– scroll through the phonebook quick search menu.</li> </ul>
7 and 8	 and 	Progressively adjust the volume of the audio source currently playing.	
7 + 8		Mute the audio source currently playing.	

## GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
9		<p>Change the mode for displaying and searching for radio stations FM - DR - AM:</p> <ul style="list-style-type: none"> <li>– List mode (search the list for FM/DR radio stations);</li> <li>– Manual mode (search FM/AM radio stations by frequency).</li> </ul> <p>With the audio media in USB/Bluetooth@:</p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> repeat playback "Repeat";</li> <li>– <b>Press and hold:</b> shuffle playback "Mix".</li> </ul>	
10			<ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to access the "Phone" world; to call the number displayed; to accept an incoming call.</li> <li>– <b>Press and hold:</b> to reject an incoming call.</li> </ul>
11		<ul style="list-style-type: none"> <li>– <b>Press briefly :</b> <ul style="list-style-type: none"> <li>– display the worlds;</li> <li>– navigate between worlds.</li> </ul> </li> <li>– <b>Press and hold:</b> to hide the area displaying the worlds.</li> </ul>	
12 and 13	 and 	<p>Scroll through worlds/menus, lists and directories:</p> <ul style="list-style-type: none"> <li>– <b>Press briefly:</b> to search manually;</li> <li>– <b>Press and hold:</b> to open the quick search directory menu.</li> </ul> <p>Media playing:</p> <ul style="list-style-type: none"> <li>– <b>Press and hold:</b> to fast forward or rewind.</li> </ul>	


## GENERAL INFORMATION

		AUDIO/MEDIA function	TELEPHONE function
14		To return to the previous level in the menus or cancel the current action, display the radio waveband selection screen, go up a level in the audio playlist directory (media).	
15		<ul style="list-style-type: none"><li>– <b>Press briefly:</b> to activate telephone voice recognition.</li><li>– <b>Press and hold:</b> to deactivate telephone voice recognition.</li></ul>	
16		Select/confirm a function or current playlist, select an item or confirm an action, store a radio station.	

# GENERAL INFORMATION


## General description

 
### World screens

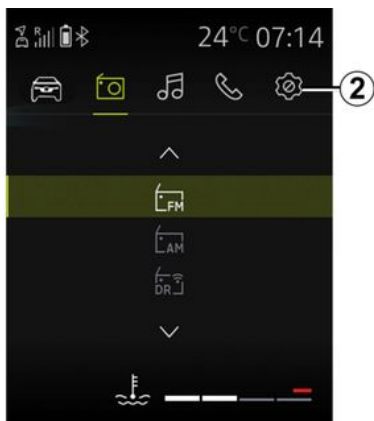

You can access the various worlds **2** at any time by pressing and holding



Press repeatedly on  to access

the "Settings" world, then  to confirm.

### Worlds display area


Your system contains several worlds:

- « Vehicle » ;

- « Radio » ;
- "Media";
- « Phone » ;
- « Settings » ;
- ...

**Note:** the availability of Worlds depends on the equipment.

You can access the different worlds at

any time using the  button on the steering wheel.



Certain functions are only available while the vehicle is stationary.

### Display screen



**A.** Status of the connection and sharing of data;

**B.** Information on the telephone network status.

**C.** Information on the telephone battery level.

**D.** Bluetooth® connection information.

**E.** Exterior temperature.

**F.** Current time.

**G.** Area for displaying available worlds.

**H.** Display area showing the world/menu currently in use.



# GENERAL INFORMATION

## Introduction

The audio system includes the following functions:

- FM and AM radio;
- terrestrial digital radio DR;
- management of USB BT Audio auxiliary audio sources;
- Bluetooth® hands-free phone system.

## Radio function

The radio can be used to listen to radio stations on the following bands: FM (frequency modulation) and AM (amplitude modulation).

The DR system (digital terrestrial radio in DAB format, DAB+, T-DMB) improves sound reproduction and enables you to access the "Radio text" stored radio text information by scrolling the text to display:

- news updates;
- sports news;
- ...



Your hands-free telephone system is only intended to facilitate communication by reducing the risk factors, but does not remove them completely. Always comply with the laws of the country in which you are travelling.

The RDS system displays the name of some stations or messages sent by the FM radio stations:

- general traffic information (TA);
- emergency messages.

## Hands-free phone function

The hands-free system Bluetooth® allows you to use the following functions without having to handle your phone:

- pair up to six phones;
- make/receive/reject a call;
- transfer the telephone or SIM card phonebook contact list SIM (depending on the phone);
- view the history of calls made using the system (depending on the phone);
- call voicemail.

## Auxiliary audio function

You can listen to your portable digital audio player directly through your

vehicle's speakers. There are several ways to connect your portable audio player, depending on the type(s) of device you have:

- Bluetooth® connection;
- USB port.




For more information on the list of compatible devices, contact an authorised dealer.

## Bluetooth® function


This function enables the audio system to recognise and control your portable digital audio player or mobile telephone via Bluetooth® pairing.

## Operation


### On and off

Briefly press on ,  or  to switch on your audio system.

The audio system can be used with the vehicle ignition off. It will operate

for several minutes. Briefly press  to keep it on for a few more minutes.

Switch off the audio system by press-

ing and holding on . The radio system display is shown in the illustra-

## GENERAL INFORMATION

tion while switched off or in "Vehicle" mode with the sound muted.

### Choosing the source


Scroll through the various audio



 
sources by pressing  repeatedly.

When scrolling, the audio sources appear in the following order: FM→ DR→ AM→ USB→ Bluetooth®.


You can also select the radio band from the "Radio" world.

Press  to select the "Radio" world,

then press  to display the band selection menu among FM, AM or DR (terrestrial digital radio), then select the

band using  or , then  to confirm.

You can also select the audio source from the "Media" world.

Press , select the "Media" world


using  or , then  to confirm. Select the audio source.

When you connect a USB media source while the audio system is switched on then the source will automatically switch to the new media and start to play its content.

 
When you connect a Bluetooth® media source while the audio system is on, if the audio source playing was already Bluetooth® then the media content will switch and start to play automatically on the audio system.

# GENERAL INFORMATION


## Volume

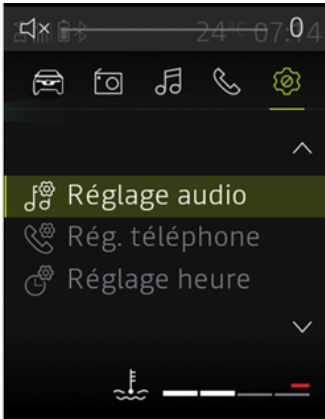


Adjust the audio volume by pressing






on the steering wheel control.

Briefly press  to increase the volume by one notch.


### **Mute**

Briefly press  to mute the sound.

Briefly press ,  or  again to resume playing the current audio source.

# AUDIO/MULTIMEDIA

## Listen to the radio

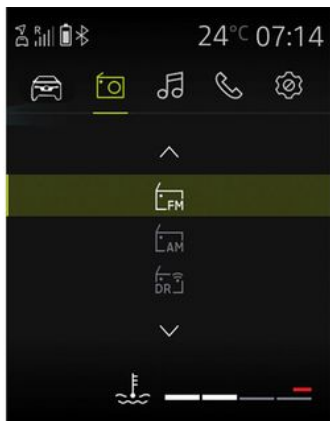

### Select a radio band

To select the desired band among FM, AM or DR (terrestrial digital radio),


press to access the "Radio" world then select the desired waveband by

pressing or , then to confirm.

### Selecting a radio station

There are several ways to select and search for a radio station:

- "list mode" available in DR and FM;
- "manual mode" available in AM and FM.

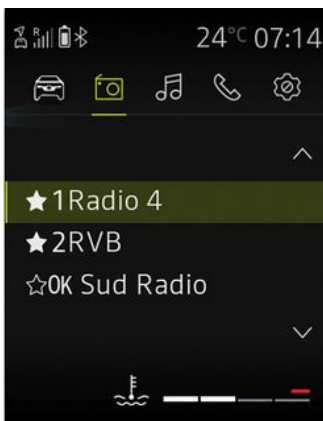

### "List mode"


This mode allows you to search for available stations by scanning the list of stations in alphabetical order, then by frequency (for stations broadcast

unnamed) using or , then to confirm.

The radio station you stop at in the list will automatically play shortly afterwards.

To return to the list of stations, use or browse using the control on the steering column, or .

Press and hold or to return to the top of the list.

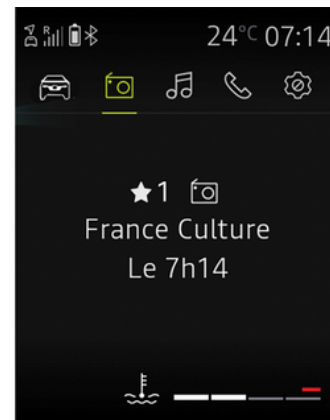

To get the most recent list of stations, update the radio list.



For more information on the list of radio stations, refer to the information on "Updating the FM list" and "Updating the DR list" in this section.

### "Manual mode"

Manual mode allows you to search for stations by browsing the frequencies in FM and AM:

- scroll to the higher frequencies using the control on the steering column or .


## AUDIO/MULTIMEDIA

– scroll to the lower frequencies by pressing  on the steering column or .


By pressing  or .

- press briefly: to search by frequency step;
- press and hold: to search for an available station automatically.

### Radio/media information

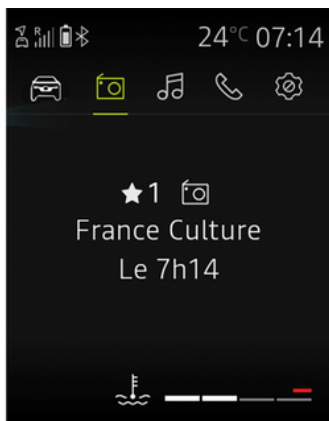

 
This function displays the information on the frequency that you wish to see on the screen (see above). It is dis-

played automatically after a moment or by pressing .

### Station memory

You can store up to six stations that will be permanently shown at the top of the list of stations ("Favourite" stations).




Select a band (FM, DR), then select a radio station using the modes described above.

To store the station, press and hold on  from the currently playing list and select the position in the Favourites. A beep confirms that the station is saved as a favourite.

By browsing through the list from the beginning, you will still be able to find your "Favourite" stations in the zone entitled « -- MEM -- ». Next comes the full list of stations sorted by alphabetical order in the zone entitled " -- LIST -- ».

The radio station you stop at will automatically play shortly afterwards. To re-


turn to the list of stations, press .

or browse using  on the steering column control,  or .


## AUDIO/MULTIMEDIA



### Selecting a station

Select the desired band (FM, DR or

AM) by repeatedly pressing on .

This list can include up to 100 radio stations stored the last time the list was updated.

Use  on the steering column con-

trol,  or  to scroll through the radio stations in the FM, DR list.

3

# AUDIO/MULTIMEDIA

## Media audio sources

Your audio system is equipped with a USB port as well as a Bluetooth® connection which can be used to connect external audio sources.

**Note:** the auxiliary audio source formats include MP3, WMA and AAC.

## USB connection

### Connect

Connect the plug of the MP3 player, portable digital audio player or USB drive to the USB port.

Once the device is connected, the track will be displayed automatically.


### Use




Once the external audio source is connected, the first audio track will start to play automatically.

The audio system automatically restarts the last track played if the external audio player was previously connected to the audio system.



Once your external audio source is connected, its contents can be accessed via the multimedia system menus. It stores playlists identical to those of your external audio player.

 
To access the contents of your external audio source via your audio system:

– press  to return to the playlist;  
or

– rotate the  on the steering column control or press  or  to scroll through the tracks.

Then, to modify the current playlist:

– press  to display the folders or selection criteria. Press again on  to return to the previous folder;  
or

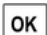– press  to select the folder, playlist or to listen to the selected track.

### Charging using the USB port

Once the USB plug of your portable digital audio player or telephone is connected to the USB port of your audio system (located near the driver's position in the passenger compartment) it will be possible to charge or maintain the battery level during use.

**Note:** some devices do not recharge or maintain the battery charge level while they are connected to the USB port on the audio system.

## Bluetooth® audio playback

In order to use your Bluetooth® portable digital audio device, you must pair it to the vehicle upon first use. Refer to the "Pairing, unpairing a phone" section.


Pairing enables the audio system to recognise and store a Bluetooth® portable digital audio device.

### Note:

– if your Bluetooth® portable digital audio device is equipped with telephone and portable audio player functions, pairing one of the functions will automatically involve pairing the other;  
– the number of functions which can be accessed depends on the type of portable digital audio player and its compatibility with the audio system.

## AUDIO/MULTIMEDIA

3

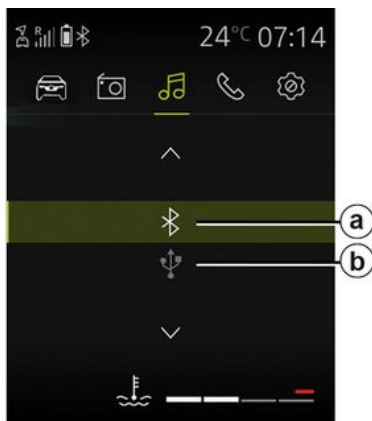

### Connecting to the vehicle

Your portable digital audio device must be connected to the audio system via Bluetooth® **a** or USB **b** in order for you to access all of its features.




Only handle the portable audio player when traffic conditions permit.

Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking or impact).

For a device already paired, perform the following operations:

- activate the radio Bluetooth® connection;
- enable your telephone or portable digital audio device Bluetooth® connection and make it visible to other devices (refer to the user manual for your device);
- select the Bluetooth® audio source

by repeatedly pressing on ;

- select the external audio player or the telephone to be connected via Bluetooth® among those detected by the multimedia system.

### Use

Your portable digital audio player must be connected to the audio system to enable access to all of its features.

**Note:** the portable digital audio player cannot be connected to the audio system unless it has already been paired.





Once the Bluetooth® portable digital audio player is connected, you can control it via your audio system.

Once the external audio source is connected **c**, the first audio track will start to play automatically **d**.




## AUDIO/MULTIMEDIA

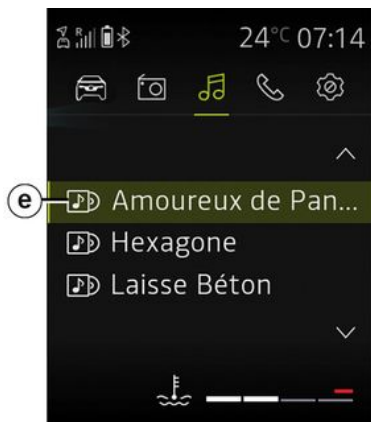

Press  on the steering wheel control to return to the playlist **e**.


Press  or  to scroll through the tracks.

To return to the playback screen **d**,

press  or wait a moment for the playlist to disappear automatically.

**Note:** the availability of functions depends on the type of portable digital audio player and its compatibility with the audio system.

### "MIX " shuffle playback

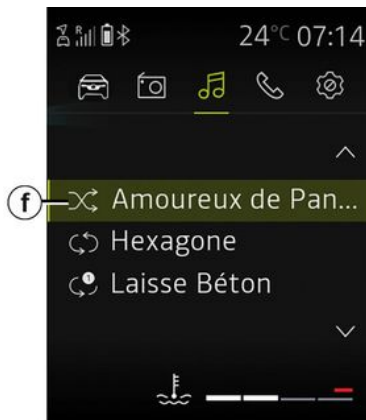


Press and hold  to shuffle all of the tracks in the folder.

The "MIX " indicator light **f** appears on the screen. A track is then selected at random. The transition from one track to another takes place randomly.


Press and hold on  again to deactivate the shuffle playback: the "MIX " indicator light **f** disappears.

Turning off the audio system deactivates the shuffle function.


### Repeat "RPT"

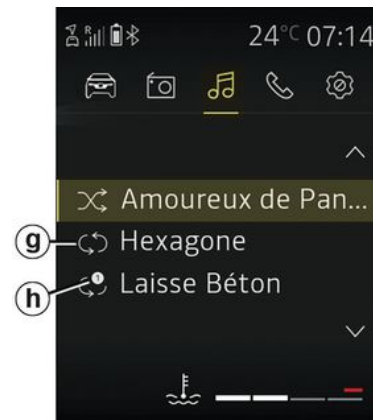 


This function enables you to repeat a playlist.

Briefly press  to activate the repeat function for the entire playlist.

The "RPT " indicator light **g** appears on the screen.

Briefly press on  again to repeat the current track: "1" **h** will appear on the "RPT" indicator light.

Briefly press on  again to deactivate the repeat function: the "RPT " indicator light **g** will disappear.

## AUDIO/MULTIMEDIA


You can also use these playback options: from the main menu, select the "Media" world then the USB source.




Only operate the portable digital audio player when traffic conditions permit.

Store the portable digital audio player safely while driving (risk of it being thrown in the event of sudden braking or impact).


3

Briefly press  to mute the sound or pause the audio track.

Briefly press  again or use the volume control to unmute the sound or resume playing of the audio track.

The audio system sound is automatically activated when changing sources or during bulletin broadcasts.

### Mute the sound/Pause

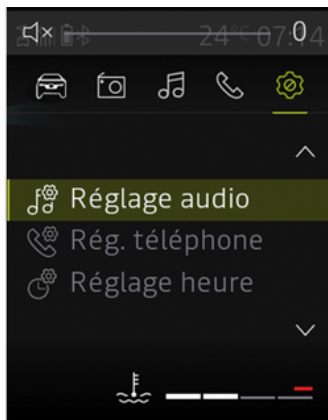


 




 
# PHONE


## Pairing/unpairing a phone

### Bluetooth® connection

To activate the audio system's Bluetooth® function:

– press  to access the main menu;  
– select the "Settings" world, then "Phone settings" followed by "Bluetooth®" using  or , then  to confirm;

– select "YES" using  or , then confirm by pressing . The Bluetooth® symbol will then appear

continuously in the status bar  on the screen.



For safety reasons, carry out these operations when the vehicle is stationary.

### Pairing a phone

To use your hands-free system, pair your Bluetooth® mobile phone with the vehicle. Check that the your phone's

Bluetooth® function is activated and set its status to "visible".


Pairing will enable the hands-free phone system to recognise and store a phone.

You can pair up to six phones, but only one can be connected at a time.

Pairing can be performed either via the audio system or via your phone.

Your audio system and phone must both be switched on.

**Note:** if you pair a new phone while another phone is already connected to the audio system, it will be disconnected and replaced by the new paired phone.

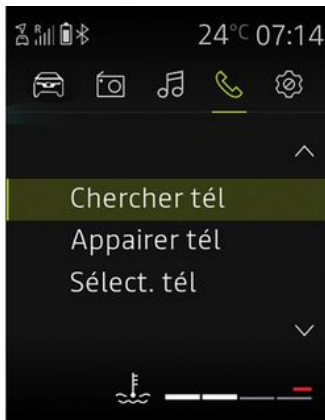


 





### Pairing a Bluetooth® phone with the audio system via the audio system

This method allows you to make a Bluetooth® search from the audio system.

 
To pair a phone, carry out the following operations:

– activate Bluetooth®;



 
– press  to access the main menu;  
– select the "Settings" world, then the "Phone settings" menu using  or , then  to confirm;

– select "Search a phone" using  or , then  to confirm.

A message is displayed on the screen.

Press  to start the search.

The search for Bluetooth® devices in the vicinity will begin (this search may take up to 60 seconds.)

Select the phone that you wish to pair using  or , then confirm using .

From your Bluetooth® device, accept the pairing request.

## PHONE

When the "Name of connected Bluetooth device" message is displayed on the audio system screen, this indicates that the Bluetooth® device is automatically stored and connected to the vehicle.

3

Your device is then visible in the list of recognised phones which can also be accessed in the "Select a phone" sub-menu.


If the pairing has not been successful after 60 seconds, the "Pairing failed" message appears. Repeat these operations to carry out the desired action. Please refer to your telephone's user guide for further information.


**Note:** depending on your phone, it may be useful to accept the transfer of your phonebook and call history.


 
### **Pairing a Bluetooth® phone with the audio system via your phone**



 
This method allows you to make a Bluetooth® search from your phone.

To pair your phone, carry out the following operations:

– press  to access the main menu;

– select the "Phone" world using 

or , then  to confirm;

– select "Pair a phone" using  or , then  to confirm.

The "Enter the code: XXXXXX" message appears on the audio system screen and a 60 seconds countdown starts.

The audio system is then visible to other Bluetooth® devices for approximately 60 seconds.

Search for the audio system using your telephone, then select it (see your telephone user manual) or accept the pairing code with your telephone.

The "MY CAR connected" or "R&Go Multimédia" message is displayed on the audio system screen to confirm that your telephone is paired and connected with your audio system.

The "R&Go Multimédia" message is displayed on the screen only if the R&Go application connects to the audio system and if the application is installed on your smartphone.

If pairing fails, the audio system display returns to the "Phone" world.





# PHONE


## Unpairing a telephone



 




Unpairing allows a phone to be deleted from the audio system memory.

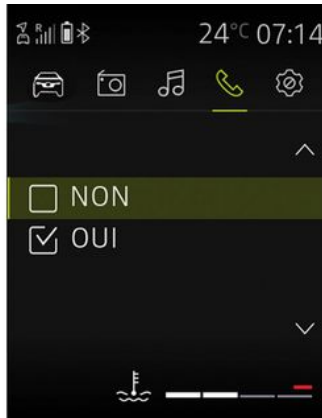 
To unpair and delete your phone from the audio system memory, perform the following steps:

- press  to access the main menu;
- select the "Phone" world, then "Delete phone" using  or ,
- then  to confirm;




– select the phone that you wish to unpair by pressing  or , then  to confirm;




 


 
– select "YES" using  or ,

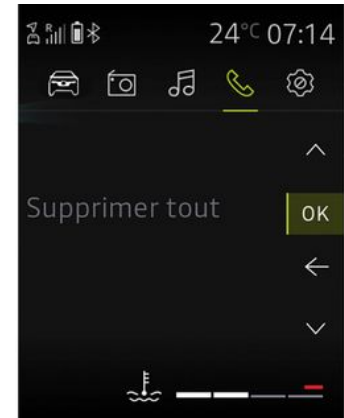then  to confirm.

If six phones are already stored, the system offers to delete one of the devices. By selecting "YES", you will be redirected to the "Delete a phone" menu.



To unpair and delete all phones from the audio system memory:

- press  to access the main menu;
- select the "Settings" world, then the "Phone settings" menu and "Delete all" by pressing  or , then  to confirm;
- select "YES" using  or ,
- then  to confirm.

**Note:** all contacts in the phonebook and the call log in the synchronised audio system will be deleted.

## PHONE



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

3

# PHONE

## Connecting/disconnecting a phone

### Connecting a paired phone

Your phone must be connected to the hands-free phone system in order to use all its functions.

A telephone cannot be connected to the hands-free telephone system unless it has previously been paired.

Please refer to the information on "Pairing a phone" in the "Pairing/unpairing a phone" section.

**Note:** your phone's Bluetooth® connection must be activated and set to "visible".

### Automatic connection

As soon as the vehicle ignition is switched on, the audio system searches for paired telephones in the vicinity.

**Note:** the last phone to have been connected is given priority.

Searching will continue until a paired telephone is found (this may take several minutes).

**Note:** for more information on the list of compatible phones, please contact an approved dealer:

– you can use automatic telephone connection with the ignition switched on. You may need to activate the auto-

matic Bluetooth® connection function on your hands-free phone system. To do this, refer to your phone user manual;

– when reconnecting, if two paired phones are within range of the hands-free system, the last phone to have been connected will take priority, even if this phone is outside the vehicle but within range of the hands-free system;


– if a call is already in progress when your hands-free telephone system is connected, the telephone will connect automatically and the conversation audio will switch to the vehicle speakers.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.



For safety reasons, carry out these operations when the vehicle is stationary.

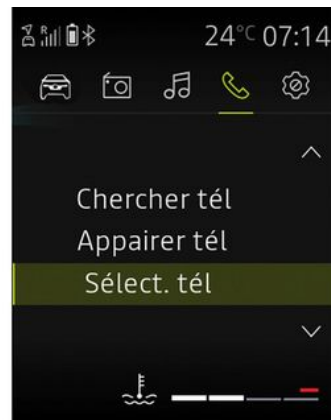

### Manual connection (changing the phone connected)


Press to access the main menu from the "Phone" world, select the "Select a phone" menu by pressing on the steering column, or , then to confirm.




## PHONE

3



The list of phones already paired is displayed.

Select the telephone that you wish to connect from the list by pressing 

on the steering column,  or , then  to confirm.

A message will appear to confirm that the telephone is connected.

**Note:** if a phone is already connected when switching to another phone, the existing connection is automatically replaced by that of the new phone.

### Connection failure

If connection fails, check that:

- your phone is switched on;
- your phone battery is not flat;
- your phone has already been paired to the hands-free telephone system;
- Bluetooth® is now enabled on your phone and on the audio system;
- the phone is configured to accept the audio system's connection request.

**Note:** using your hands-free telephone system for prolonged periods will discharge your phone's battery more quickly.

### Telephone information



Once connected, the audio system displays telephone-related information:

- the telephone network status **1**;
- the telephone battery level **2**;

- the type of connection to the multimedia system **3**.

### Disconnect a phone

To disconnect your telephone, you can:

- deactivate the Bluetooth® function on your audio system;
- deactivate your phone's Bluetooth® function;
- delete the paired phone via the audio system. Please refer to the information on "Unpairing a phone" in the "Pairing, unpairing a phone" section.

If the phone is switched off, the phone will be disconnected.

A message is then displayed on the audio system screen to confirm that the phone is disconnected.

**Note:** if a call is in progress when the phone is disconnected, the call will be automatically transferred to your phone.

To deactivate Bluetooth® on your audio system, refer to the information on the "Bluetooth® function" in the "General Description" section.

To disable your smartphone's Bluetooth®, refer to your phone's user guide.

To unpair and delete the Bluetooth® phone, see the information under "Un-



# PHONE

pairing a phone" in the "Pairing, unpairing a phone" section.

## Making, receiving a call

### Calling a contact from the telephone directory


When pairing a phone, its phonebook is automatically uploaded into the audio system (depending on the phone).


You can also authorise automatic sharing of the phonebook and call logs so that the multimedia system transfers them automatically during your next pairings.

If access has not been authorised, a message is displayed on the audio system screen asking you to authorise access to the phonebook.




 


 
If the multimedia system cannot find your telephone, please consult your telephone user manual.

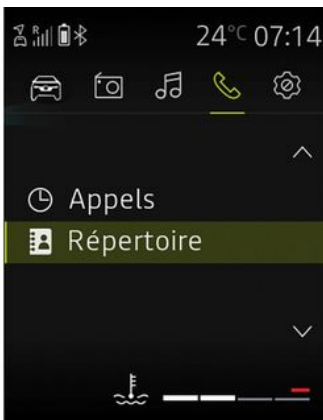**Note:** you can call a number or contact



by briefly pressing  (please refer to the "Using voice recognition" section).




 


 


 



To search for a contact:

- press  to access the main menu, then select the "Phone" world by pressing  or , then  to confirm;
- select the "Contacts" menu by pressing  or , then  to confirm.

From the "Contacts" menu, you can search for a contact by name. To do this:

- press and hold on  or  to activate the search;

- press  on the steering column,  or  to scroll through the letters of the alphabet;
- when you have selected the desired letter, press  to confirm;
- select the desired contact by pressing  or , then press  to display the contact's stored number(s);
- select the desired number by pressing  or , then press  to confirm and start the call.


**Note:** to return to the previous screen, press .









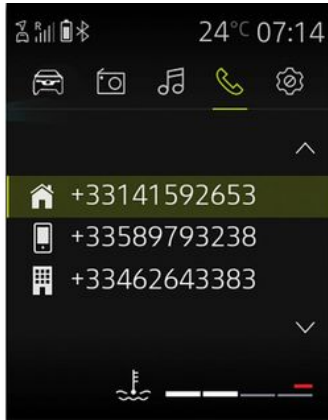


It is recommended that you stop driving the vehicle before searching for a contact.

# PHONE


## Call a contact from your call log history



To display the call history:

- press  to access the main menu, select the "Phone" world, then use  or  to select "Calls" by pressing  or , then  to confirm;
- select the contact or the number to call by pressing  or , then press  to start the call.

## Receiving a call

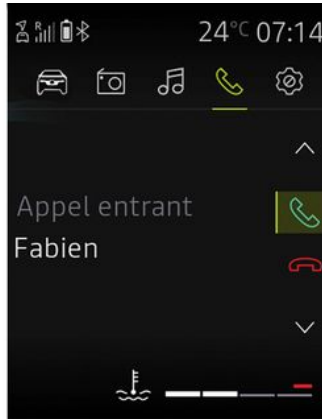


 


When receiving a call, the caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider).


If the caller's number is in one of the memories, the name of the caller is displayed instead of the number.

If the caller's number cannot be displayed, the "Private number" message is displayed on the audio system screen.




 

To accept an incoming call:

- select the  icon by pressing  or , then  to confirm;

or

- briefly press .

To reject an incoming call:

- select the  icon by pressing  or , then  to confirm;
- or
- press and hold .





It is recommended that you stop your vehicle before entering a number or searching for a contact.


# PHONE

## Receiving a second call






When receiving a second call, the second caller's number is displayed on the audio system screen (this function depends on the options you have subscribed to with your telephone service provider). You can:

- accept the incoming call by selecting ;
- reject the incoming call by selecting ;
- put an incoming call on hold by selecting **1**.

To hang up during the conversation, press .



## During a call


You can:

- adjust the volume by pressing  or ;
- end the call by pressing .


Press  or , then  to confirm.

You can also:





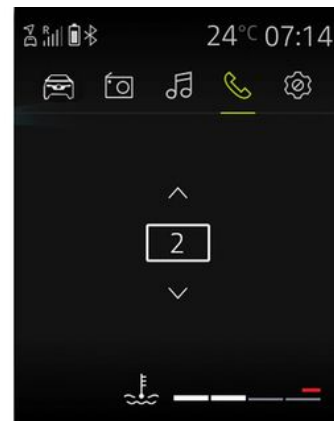

- accept the incoming call/resume a call placed on hold by selecting ;
- end a call by selecting  during the conversation;
- put a call on hold by selecting **1**;
- select **2** to use the audio system keypad to enter the digits.


 The system allows managing call waiting when your phone is connected (depending on your plan).

## Using the keypad during a call




To use the audio system keypad during a call:



- select the audio system keypad by pressing  or , then  to confirm;
- select the digit or character by pressing  or , then press  to confirm your choice.

**Note:** to return to the previous screen, press .

# SYSTEM SETTINGS

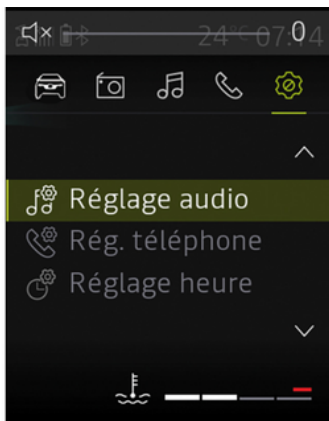3



From the main menu, press  or  to browse to the "Settings" world.


The following settings are available:

 
- "Audio settings";
- "Phone settings";
- "Vehicle settings";
- "Time settings";
- ...



For safety reasons, carry out any adjustments while the vehicle is stationary.


## Audio settings

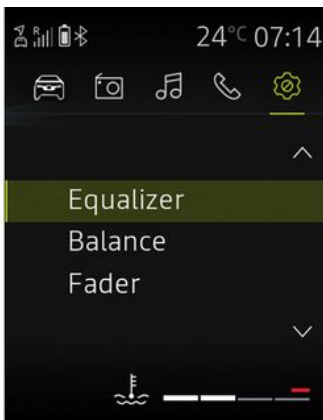



From the "Settings" world. Select the "Audio setting" menu, "Audio settings", then  to confirm.

The following settings are available:

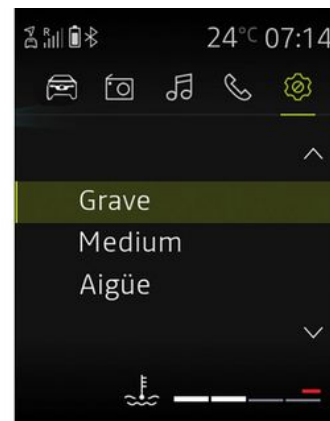- "Equaliser";
- "Spatialisation";
- "Volume mph (km/h)";
- « Bass boost » ;
- "Reset".



## "Equaliser"

Select "Equaliser", then press  or  to access the various options in the following order:



- « Bass » ;
- "Medium";
- « Treble ».

 
## "Spatialisation" (sound distribution)

The "Spatialisation" function to adjust the sound distribution in the passenger compartment:

- "Balance" (left/right sound distribution);
- depending on the vehicle;
- "Fader" (front/rear sound distribution).

## SYSTEM SETTINGS

 
You can change the value of each setting by pressing  or .

Press  to confirm and return to the previous selection.

### "Volume sensitive to speed"


The volume of the audio system varies in relation to the vehicle speed.

Access the "Audio setting" menu, then confirm "Volume mph (Km/h)" by

pressing .


To reach the desired setting, select one of the following:

- « OFF » ;
- "Very low";
- « Low » ;
- « Middle » ;
- "High";
- « Very high ».

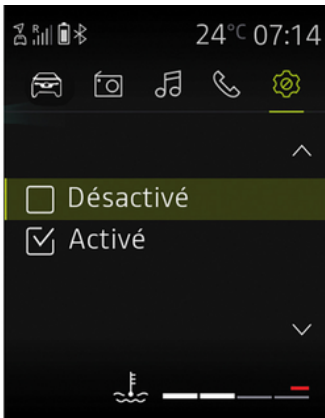




### « Bass boost »

The "Bass boost" function can be used to increase the bass when listening at low volume.



Access the "Audio setting" menu, then confirm "Bass boost" by pressing 

or , then press .

To activate/deactivate this function, select "Activated" or "Deactivated" by


pressing  or , then  to confirm.

### "Default audio"


From the main menu, press  or  to browse to the "Settings" world. Display the "Audio setting" menu and select "Audio settings", then "Reset". Select "YES" or "NO".

All the audio settings return to their default values.






 
Press the  button to return the previous menu.
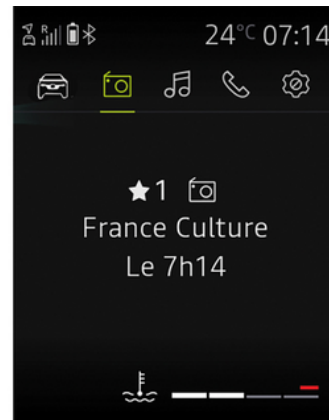
## Radio settings



## SYSTEM SETTINGS

Display the Settings menu by briefly

pressing on , select the "Settings" world, then "Audio setting", "Radio settings" by pressing  or , then  to confirm.



 
The available functions are as follows:

- "Update FM list";
- "Update DR list";
- « Simulcast » ;
- "Priority to DR";
- « TA » ;
- « AF ».

### "Update the "FM" list

This feature allows you to perform an update of all FM stations in the area where you are located.

From the "Settings" world, select the "Radio settings" menu, then "Update



 
FM list" by pressing  or , then  to confirm.

Automatic updating of the FM stations in the area will begin. The "Update FM list" message is displayed on the instrument panel.

Once the update is complete, the "FM list updated" message is displayed on the screen.

### "Update the "DR" list


This feature allows you to perform an update of all DR stations in the area where you are located.

From the "Settings" world, select "Audio setting", "Radio settings", then "Update DR list" by pressing  or , then  to confirm.

Automatic updating of the DR stations in the area will begin. The "Update DR list" message is displayed on the instrument panel.

Once the update is complete, the "DR list updated" message is displayed on the screen.

**Note:** if another source is selected by

pressing , the FM or DR radio list will be updated in the background.

### « Simulcast »

Depending on the country, this function switches from a DR station to the equivalent FM station if the digital signal is lost.

If the "FM/DR simulcast" is activated, there may be lag of a few seconds when switching from FM to DR or from DR to FM. There may also be a difference in the sound volume.

The system will automatically switch back to DR as soon as the digital signal is received.

**Note:** during the simulcast, the station name is preceded by "FM>".

### "Priority to DR"



 
Depending on the country, this function allows you to select an FM station (if the radio station requested is also available in digital) and switch to the equivalent DR station to obtain better sound quality.


**Note:** while DR is prioritised, the station name is preceded by "DR>".


### « TA »

When this feature is activated, your audio system searches for and automatically plays traffic bulletins as new reports are broadcast by some "FM" or "DR" radio stations.

To activate or deactivate this function:

– from the "Settings" world, select the "Audio setting" menu, then "Radio settings" using  or , then  to confirm;

– select "TA" by pressing the  control on the steering column, then

 to confirm;

– select "ON" or "OFF" to activate or deactivate the "TA" function.

### "AF" (automatic retuning AF)



## SYSTEM SETTINGS

 
The frequency of an FM station changes according to the geographical area.

Some stations use the RDS system, mainly for automatic retuning of "AF" while the vehicle is moving.

### Phone Settings

Use this function to adjust the settings of the telephone connected to the audio system.


From the main menu, press  or  to browse to the "Settings" world.

Select "Phone settings", then  to confirm.



 
The following settings are available:

- "Search a phone";
- "Pair a phone";
- "Select a phone";
- "Delete a phone";
- "BT ON/OFF".

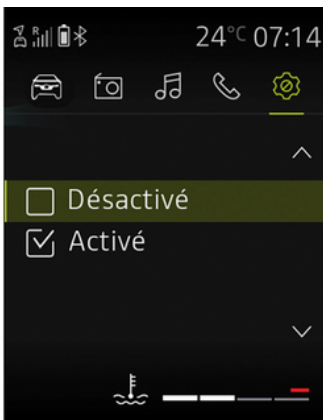Please refer to the corresponding sections.



### "BT settings" (Bluetooth®)

From the main menu, press  or  to browse to the "Settings" world. Select "Phone settings", "BT ON/OFF" then  to confirm.

To activate Bluetooth® for the audio system, select "Activated" by pressing

 or , then  to confirm.

To deactivate Bluetooth® for the audio system, select "Deactivated" by pressing  or , then  to confirm.

### Selecting a language


 
Use this function to change the audio system display language on the instrument panel.

Display the settings menu by pressing



Select the "Settings" world, "Vehicle setting" and "Language", then select the desired language by pressing



or  and press  to confirm.



 
### Setting the time

This function allows you to set the time.

 
Display the settings menu by pressing





Select the "Settings" world,



"Time setting" using  or  then  to confirm.

The "Clock" menu is displayed:

– press and hold  to access the Hours setting;

– adjust the hour by pressing  or , then wait for a moment until the selection automatically switches from the hour setting to the minute setting;

## SYSTEM SETTINGS

– set the minutes by pressing  or , then wait for a moment until the setting is automatically confirmed.

3



Depending on the brand and model of your telephone, the hands-free functions may be partially or fully incompatible with your vehicle's audio system.



For safety reasons, carry out any adjustments while the vehicle is stationary.



# INTRODUCTION R&GO

## Introduction



"R&Go" is an application that can be downloaded using your smartphone or tablet.

From this app you can access several menus:

- « Navigation » ;
- "Multimedia";
- « Vehicle » ;
- « Phone » ;
- "Calendar";
- « Settings ».

### Note:

- for further information on compatible phones and tablets, please contact an authorised dealer or visit the manufacturer's website if available;
- for further information on this app, please consult the section entitled "R&Go: general description".



### Telephone holder


Depending on the equipment, while using the "R&Go" app your phone can be attached to the centre console thanks to its ergonomic shape **1**.

### Charging using the USB port

By connecting your telephone's USB plug to the USB port, you can charge your battery or keep it charged during use.

# R&GO GENERAL DESCRIPTION

## Display

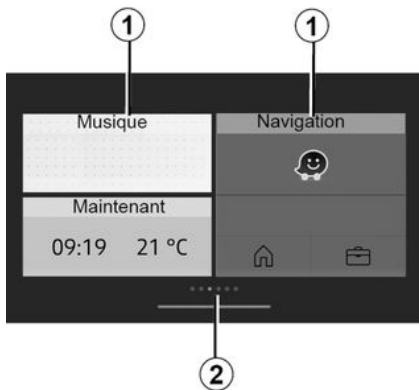

### Customised home page


1. Access to pinned applications.
2. Page indicators.

**Note:** you can change the home screen configuration. See the "R&Go: adjusting settings" section.

### Bluetooth® connection

Check that your phone or tablet is paired with the audio system (see the information on "Pairing a phone" in the "Pairing, unpairing a phone" section).


**Note:** the Bluetooth® on your phone or tablet must be activated and set to "visible" (for more information, please see the user manual for your device).

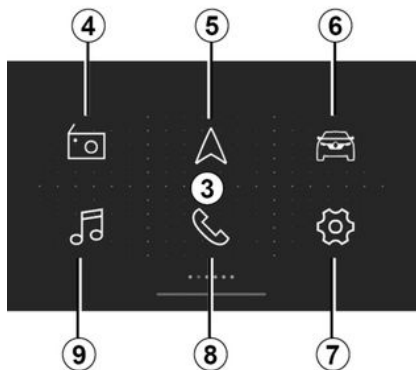

### Default 3 "R&Go" home screen

The default home screen displays the following menus:

4. "Radio": manage the radio;
5. "Navigation": manage navigation;
6. "Vehicle": manage your fuel consumption, Driving Eco, etc.
7. "Settings": manage the "R&Go" app settings;
8. "Phone": manage your phone functions;
9. "Multimedia": manage multimedia resources.

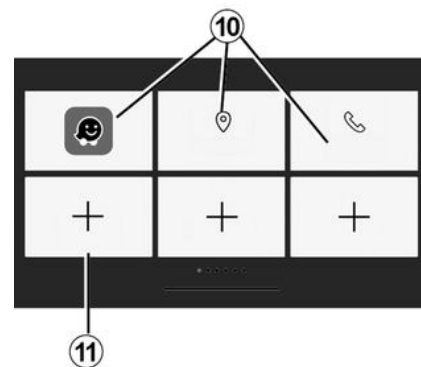


### Favourites screen

Use the "R&Go" system to add shortcuts to your favourite functions:

- apps;
  - contacts;
  - "R&Go" functions;
  - music;
  - navigation;
  - ...
- 10.** Access functions previously designated as favourites.
- 11.** Access to the favourites management screen.

## R&GO GENERAL DESCRIPTION

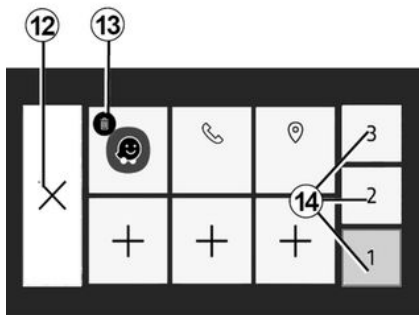

### Favourites management screen

To access the favourites management screen, press the button **11**:

**12.** back to the previous screen;

**13.** delete the favourite;

**14.** access the various favourites management pages.



It is recommended to keep your "R&Go" app up to date.

### Customising the home page


You can customise the "R&Go" home screen. To do this, press the button **11**

or press and hold anywhere on the customised home page, then slide an application available at the bottom of the screen to the desired position. If you slide the app to a location that is already in use, it will automatically be replaced.



Your hands-free system is intended to facilitate communication by reducing the risk factors, without removing them completely. Always comply with the laws of the country in which you are travelling.

## "Radio" menu

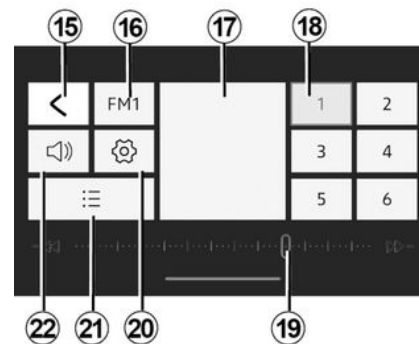

4

From this menu you can listen to radio stations and do the following:

**15.** return to the main menu;

**16.** select a radio band (FM, DR or AM);

**17.** see the currently playing radio station;

**18.** select radio presets/favourites;

**Note:** "R&Go" lists the vehicle radio presets/favourites.

**19.** Radio frequency band, radio frequency information;


**20.** access the sound settings;

**21.** list of available stations;

## R&GO GENERAL DESCRIPTION

22. manage the volume.

### "Navigation" menu

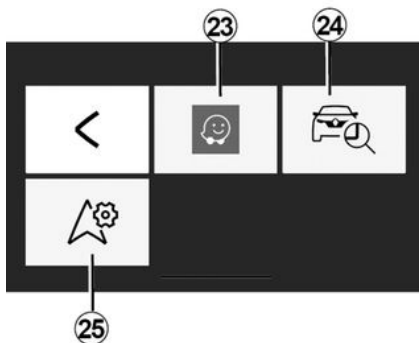


The navigation menu includes all the satellite navigation features, road maps, traffic information, navigation applications and warning areas. The "Navigation" menu offers the following functions:

**23.** smartphone navigation app for planning your journeys;

**24.** app enabling you to geolocate your vehicle;

**25.** access to the settings enabling you to set a default navigation application.

### "Multimedia" menu

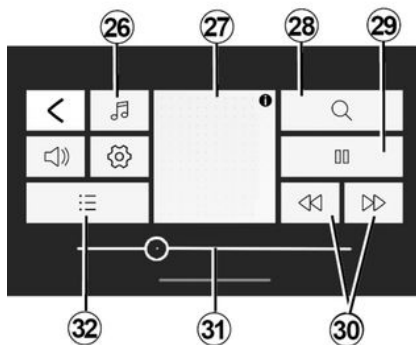

The "Multimedia" menu includes all the functions for playing audio files and enables you to:

**26.** select the source of the audio files;

**27.** see the multimedia file currently playing;

**28.** search for a multimedia file;


**29** < ?indd kTextChar\_Tab ?>. play/pause;

**30.** next/previous file;

**31.** scroll bar, remaining time for the multimedia file currently playing;

**32.** playlist selection.

### "Vehicle" menu

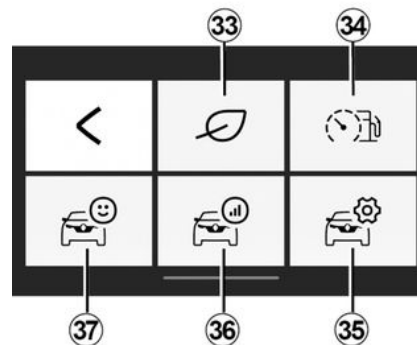

The "Vehicle" menu can be used to manage some of the equipment, such as the trip computer and the Driving Eco. It provides the following functions:

**33.** access the Driving Eco menu (view your eco-score, etc.);

**34.** driving behaviour or current consumption indicator;


**35.** access to settings and information;

**36.** access your "Journey record";

**37.** access to the instrument panel of your vehicle.

## R&GO GENERAL DESCRIPTION

### "Phone" menu

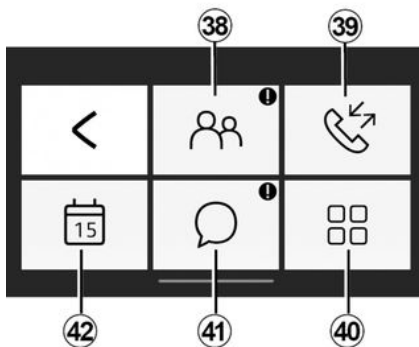

The "Phone" menu allows you to use your phone in hands-free mode and do the following:

- 38.** access your phonebook;
- 39.** access your call log;
- 40.** access the "Phone" menu settings;
- 41.** access your messages;
- 42.** access the calendar.

#### Forgotten phone reminder

With the engine and audio system switched off, the "R&Go" app displays a warning message on your smartphone screen and emits a beep to in-

form you that you have left your phone in your vehicle.

**Note:** on some phones and tablets, the "Text-to-speech" function is available. The audio system reads the messages aloud.


#### Adjusting the audio volume

You can adjust the audio volume by swiping vertically on the smartphone screen:

- **swipe upwards** to increase the volume;
- **swipe downwards** to decrease the volume.

Several sweeps may be required to reach the desired volume.

## R&GO NAVIGATION FUNCTION

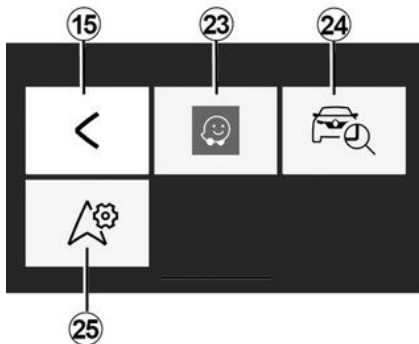

### « Navigation »

To access the navigation menu from the default "R&Go" main menu, press the "Navigation" button.

The "Navigation" menu consists of three icons:

- 15.** return to the default main menu;
- 23.** access the navigation app to manage your defined routes;

**Note:** to hear the navigation app instructions on the vehicle's speakers, select the Bluetooth® audio source.

For more information, see the paragraph on "Pairing a Bluetooth® phone with your audio system using your

phone" in the "Pairing, unpairing a phone" section.

**24.** Access the "Go To My Car" app to geolocate your vehicle;

**25.** set the navigation app that you wish to use by default.



For safety reasons, carry out any adjustments while the vehicle is stationary.

### "Find my vehicle"

This function allows you to geolocate your vehicle in order to find it in a car park for example.

From the "Navigation" menu, press the icon **24** "Go To My Car".

To find your vehicle, you can:

- enter the location in the "Vehicle parking address" field;
- press the "Go to my car" button to launch navigation to the pre-set address in pedestrian mode.

**Note:** this function is only available and operational when outside the vehicle. If your vehicle has been moved by a third party between the time of saving its GPS position and the time you wish to find it, the application cannot search for its current position.

### "Navigation settings"

This function allows you to set your chosen default navigation application.

From the "Navigation" menu, press the "Navigation settings" icon then select the navigation app that you wish to use from the list of suggestions.




When you use your smartphone's navigation app, the transfer of cellular data required for it to operate may lead to additional costs not covered by your phone plan.



For safety reasons, carry out any adjustments while the vehicle is stationary.

## R&GO VEHICLE FUNCTION

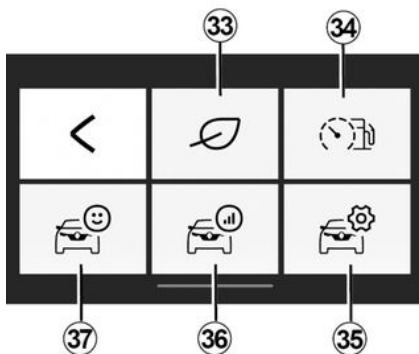

### « Vehicle »

To access the "Vehicle" menu from the default "R&Go" main menu, press the "Vehicle" button.

The "Vehicle" menu consists of several icons:

- 33.** access the "Driving Eco" menu;
- 34.** driving behaviour and current consumption indicator;
- 35.** access the app "Vehicle" menu settings;
- 36.** access your last journey record;
- 37.** access the data on the instrument panel of your vehicle.

#### Note:

– to use all of the "Vehicle" menu functions, you must connect your smartphone/tablet Bluetooth® to the audio system;

– some functions are not available for an electric vehicle.

#### « Driving Eco »

This function allows you to display a real-time overall score that reflects your driving style.

This score takes into account the following criteria:

- acceleration;
- the ability to anticipate braking;
- compliance with gear changing.

You can see your overall score and personalised advice at the end of every trip.

You can also observe:

- the distance travelled without consuming fuel;
- the scores for your last ten trips.

#### Note:

- depending on the phone, the "Driving Eco" app no longer records your scores if running in the background;
- once the app is running, press the "Reset" button on the instrument panel to start a new journey.

A journey has to be more than 400 metres to be taken into account. If the time between the stopping and starting

the engine is less than four hours, the application continues to take the journey into account before stopping.



For safety reasons, carry out any adjustments while the vehicle is stationary.

#### "Driving behaviour and current consumption indicator"

Use this function to view your instantaneous fuel consumption compared to your vehicle's average consumption and to observe your driving behaviour.

**Note:** this function is not available on GPL versions.

#### « Settings »

This function allows you to access the settings in the "Vehicle" menu and to configure certain options.

#### "Journey record"

This function enables you to assess your driving style over your previous journeys:

- acceleration;
- changing gears;
- anticipation;
- ...

#### « Instrument panel »


## R&GO VEHICLE FUNCTION

This function allows you to access the various data recorded on your instrument panel, such as:

- average speed;
- average fuel consumption;
- total distance;
- distance travelled since last reset;
- ...



# R&GO MULTIMEDIA FUNCTION

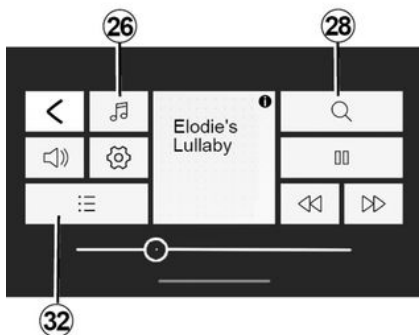

## "Multimedia"

To access the multimedia menu, from the default "R&Go" main menu, press the "Multimedia" button.

**Note:** to use all of the functions on the "Multimedia" menu, you must connect your smartphone/tablet Bluetooth® to the audio system.



## "Set the source"

To access the multimedia source selection menu, press the **26** "Multimedia" button. You can use this menu to select the source from:

**47** "Radio": the available radio stations selection menu;

**48** "Media": the menu to select input sources connected to the audio system;

**49** Search.


### « Radio »

This menu allows you to listen to radio stations and provides the following functions:

- select a band: "FM", "DR" or "AM";
- select a station using one of three search modes ("Frequency", "List" or "Manual" mode);
- search for a station using the integrated intelligent keypad;
- listen to stored stations;
- view text information from certain "FM", "DR" or "AM" radio stations while listening.

For further information, please refer to the section on "Listening to the radio".

## "Media"

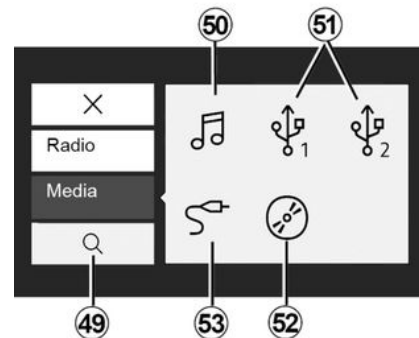

This menu enables you to listen to music from an external source. Select a connected input source to access the audio files from the following list:

## R&GO MULTIMEDIA FUNCTION

**50.** Access multimedia files saved on the smartphone;

**51.** access multimedia files saved on a MP3 player or USB device;

**52.** access multimedia files stored on a CD (depending on equipment);

**53.** access multimedia files on a source connected to the audio system Jack socket.

The search feature offers the following functions:

**54.** search by podcast;

**55.** search by title;

**56.** search by album;

**57.** search by genre;


**58.** search in playlists;

**59.** search by artist.

### Note:

– only available sources can be selected. Unavailable sources are greyed out;

– in the case of playing a multimedia file, R&Go does not control external apps.

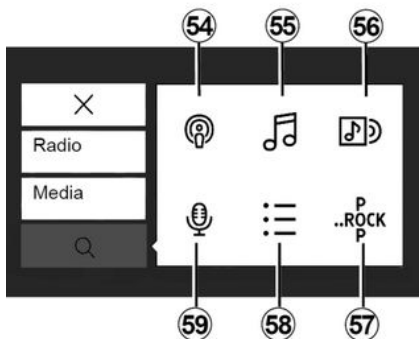

### « Search »

You can access the function from the multimedia menu by pressing the "Search" icon **28**.

You can use this menu to search a multimedia file on the external audio source selected.


You can access the function from the multimedia menu by pressing **32** or **58** "Playlists" from the multimedia menu.

This menu allows you to access your custom playlists.

### "Multimedia settings"

This menu enables you to adjust the following settings:

- « Balance / Fader » ;
- « Bass / Treble » ;
- "Voice instructions";
- "Bluetooth®" volume;
- « AUX In » ;
- "iTrafic";
- "DR alerts";
- "Update FM list";
- "Update DR list";
- "Ringtone volume";
- "Ringtones";
- "Default settings".

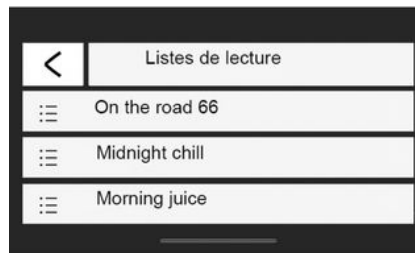


### "Playlist"



For safety reasons, carry out any adjustments while the vehicle is stationary.

## R&GO TELEPHONE FUNCTION

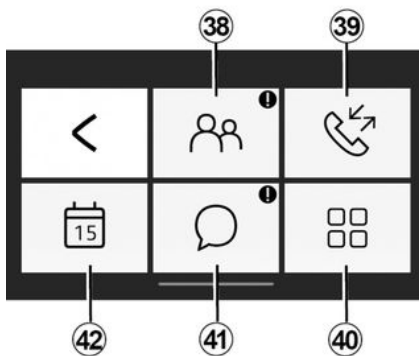

### « Phone »


To access the "Phone" menu from the default "R&Go" main menu, press the "Phone" button.

The "Phone" menu consists of several icons:

**38.** Access the phonebook;

**39.** access your call log;

**40.** dial a number using the digital keypad, depending on your phone model;

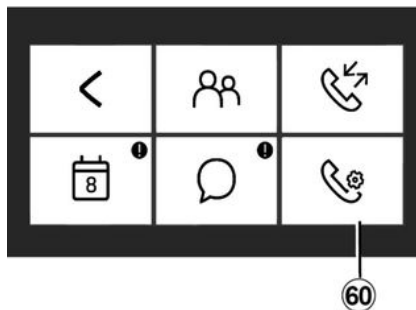

**41.** access messages received on your smartphone or tablet;

**42.** access your "Calendar";

**60.** access the "Phone" menu settings, depending on your phone model.

**Note:** you can listen to your telephone voicemail by pressing and holding the "1" button on the radio panel keypad.

First, press and hold the "1" button on the radio panel keypad to save your phone voicemail number.

### « Contacts »

Press the "Contacts" icon to access the phonebook on your phone Bluetooth®.

After connecting your audio system with your Bluetooth® phone using

Bluetooth® wireless technology, your phonebook contact numbers can be accessed via the "R&Go" app.

Select the contact (if the contact has more than one number, you will be requested to select the number to call). The call will be started automatically after you press the contact's number.

When an address is linked to a contact, you can launch the navigation application. To do this, press the navigation icon to navigate to the stored address.

**Note:** to scroll through the list of contacts, slide your finger upwards on your smartphone screen.

### "Call log"

Use the call log to see:

- outgoing calls;
- missed calls;
- incoming calls.

When you view the call history list, the contacts are displayed from the most recent to the oldest.

To navigate through the call log, slide your finger upwards on your smartphone screen.

To make a call from the call history list, select the contact that you wish to call from the list.

### "Phone settings"

## R&GO TELEPHONE FUNCTION

Depending on your phone model, this function enables you to access the "Phone" menu settings and to configure certain options.

### « Dial »

Depending on your phone model, the "Dial" function enables you to dial a phone number and call a contact via the "R&Go" app.

To dial a number, press the number buttons. When you have completed the number you wish to call, press the




button to make the call.

### "Messages"

The "Messages" function can be used to read and/or listen to text messages received while the "R&Go" app is in use.

**Note:** to scroll through the list of messages, slide your finger upwards on your smartphone screen.

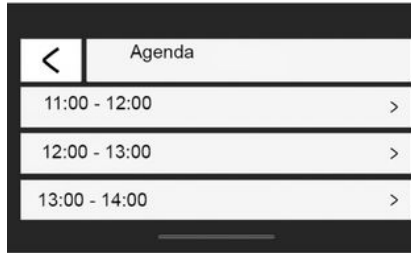


### "Calendar"

The "Calendar" function can be used to access all entries (daily appointments, events, etc.) stored on the calendar of your phone or tablet. If a postal address is associated with an event, you can launch the navigation app to navigate to that location. To do this, press the navigation icon to navigate to the stored address.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

# R&GO ADJUSTING THE SETTINGS

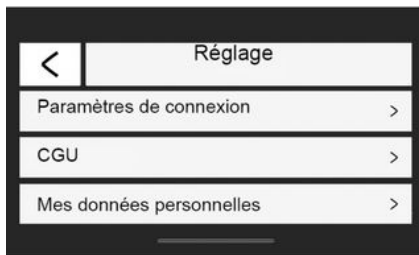

## "Settings"

To access the settings menu from the default "R&Go" main menu, press the "Settings" button.

The "Settings" menu for the "R&Go" system can be used to adjust or view the following:

- run the "R&Go" automatically once connected to the audio system;
- information on your user account;
- the terms and conditions of use;
- the connection to the audio system;
- the instruction tutorial for the app;
- the shortcut button to return to the "R&Go" app;
- restore default settings;

- the "R&Go" version installed on your phone;
- the Bluetooth® connection (automatic or manual);
- ...

## "Connection settings"

### "Pairing"

This function allows you to activate the Bluetooth® function on your phone and to search the audio system MY CAR ».

### "Launch R&Go"

Select this option to activate or deactivate the automatic launch of the application as soon as the connection to your vehicle's audio system is established.

### « CGU »

This option allows you to view the terms and conditions of use.

## "My personal data"

This option enables you to view personal data protection information.

### « Hotline »

This option allows you to view the data required for manufacturer support.

## "Tutorial"

You can use this function to view the instruction tutorial for the "R&Go" app.

## "Default settings"

This option enables you to return to the default settings.

## "Activate the R&Go information"

Tick to activate or deactivate the display of the application shortcut button. This function requires a system authorisation in order to be used. This button can only be seen when you are outside the "R&Go" app. When you press the shortcut button, the "R&Go" app will open.

## "Statistics monitoring"

This function allows you to activate or deactivate data transfer to a dedicated statistics tool.

## "R&Go Version"

This option allows you to check your application version.

## R&GO ADJUSTING THE SETTINGS



For safety reasons, carry out any adjustments while the vehicle is stationary.

4

# USING VOICE RECOGNITION


## Voice recognition system

The audio system can be used to operate voice recognition via your smartphone (if compatible). This makes it possible to control the functions of your smartphone by voice, while keeping your hands on the steering wheel.

### Note:

 
- your smartphone's voice recognition system only enables you to use the functions provided with your smartphone. It does not enable you to interact with the other audio system functions, such as the radio etc.
- when using voice recognition, the audio system will use the language set on your smartphone;
- if you try to use your vehicle's voice recognition system with a paired smartphone that is not equipped with voice recognition, a message will be displayed on the audio system screen to notify you.

## Using voice recognition with your phone

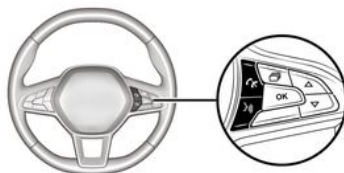 


### Activation

To activate the voice recognition system, you must:

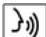- have a 3G, 4G signal or WIFI on your smartphone;
- activate the Bluetooth® function on your smartphone and make it visible to other devices (refer to your smartphone user manual);
- pair and connect your smartphone to the audio system (refer to the section on "Pairing, unpairing a phone");
- press briefly on  to activate the function, then speak (a beep indicates that voice recognition is activated).



### Deactivation

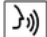Press and hold on .

An audible signal indicates that voice recognition is deactivated.

# WIRELESS CHARGER

## Introduction

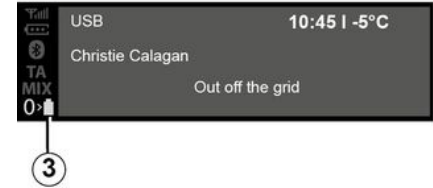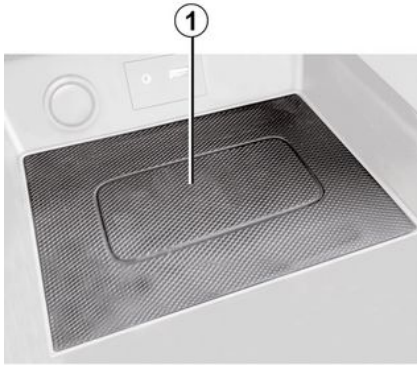

The induction charging area **1** can be used to charge a telephone without a cable.

If the vehicle is equipped, the charging area is indicated by (depending on the vehicle):

- an associated symbol;

and/or

- the charging status is automatically displayed on the screen as long as the phone is positioned in the dedicated area.

Its location may vary depending on the vehicle. Please refer to the vehicle user manual for further information.

### Note:

- for more information on compatible phones, please contact an approved dealer or visit the manufacturer's web-site;
- to enable optimal charging, it is preferable to remove the protective case from your phone before charging;
- the entire surface of the phone must be aligned with the surface of the charging mat to enable optimum charging.

## Charging procedure

Position your telephone **2** in the induction charging area **1**. Charging is automatically started and the charging progress **3** is displayed on the screen.

Phone charging **2** is interrupted in the following cases:


- an object is detected in the induction charging zone **1**;
- the induction charging zone **1** is overheating. Once the temperature has dropped, your phone's charging procedure **2** will soon restart.



# WIRELESS CHARGER

**i** Objects left in the induction charging area **1** may over-heat. You are advised to place them in the areas provided for this purpose (storage compartment, sun visor compartment etc.).

## Charging progress

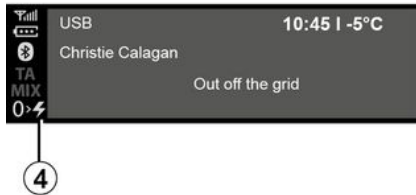

The charging progress is displayed on the audio system panel:

- charging complete **3**;
- charging in progress **4**;
- metallic object detected **5**.



**i** It is essential not to leave any objects (USB drive, SD card, credit card, starting card, jewellery, keys, coins, etc.) in the induction charging zone **1** when charging your phone. Remove any magnetic cards or credit cards from the phone case before positioning your telephone in the induction charging area **1**.

## OPERATING FAULTS

Description	Possible causes	Solutions
No sound can be heard.	The mobile phone is not plugged in or connected to the system. The volume is set to minimum or the audio is paused.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate pause.
The audio system does not work and the display does not light up.	The audio system is not switched on.	Switch the audio system on.
	The audio system fuse has blown.	Replace the fuse (see the section on "Fuses" in the vehicle user manual).
The audio system does not work but the display lights up.	The volume is set to minimum.	Press <b>19</b> or rotate <b>1</b> .
	Speaker short circuit.	Consult an approved dealer.
No sound comes from the left or right-hand speakers.	The sound balance setting (left/right) is incorrect.	Correct the sound balance setting.
	Speaker disconnected.	Consult an approved dealer.
Poor radio reception or no reception.	The vehicle is too far from the transmitter to which the radio is tuned (background noise and interference).	Search for another transmitter with a better local signal.
	The reception is disrupted by interference from the engine.	Consult an approved dealer.
	The aerial is damaged or not connected.	Consult an approved dealer.

5

## OPERATING FAULTS

Description	Possible causes	Solutions
The phone does not connect to the system.	<ul style="list-style-type: none"> <li>– Your phone is switched off.</li> <li>– Your phone battery is flat.</li> <li>– Your phone has not yet been paired to the hands-free phone system.</li> <li>– The Bluetooth® on your phone and on the system are not active.</li> <li>– The phone is not configured to accept the audio system's connection request.</li> </ul>	<ul style="list-style-type: none"> <li>– Switch your phone on.</li> <li>– Recharge your phone battery.</li> <li>– Pair your phone to the hands-free phone system.</li> <li>– Activate the Bluetooth® on your phone and the system.</li> <li>– Configure the phone to accept the audio system's connection request.</li> </ul>
The Bluetooth® portable audio player does not connect to the system.	<ul style="list-style-type: none"> <li>– Your portable audio player is switched off.</li> <li>– Your portable player battery is flat.</li> <li>– Your portable audio player has not already been paired to the audio system.</li> <li>– The Bluetooth® on your portable audio player and on the audio system are not active.</li> <li>– The portable audio player is not configured to accept the audio system's connection request.</li> <li>– The music is not activated from your portable audio player.</li> </ul>	<ul style="list-style-type: none"> <li>– Switch on your portable audio player.</li> <li>– Recharge the battery in your portable player.</li> <li>– Pair your portable audio player to the audio system.</li> <li>– Activate Bluetooth® on your portable player and the audio system.</li> <li>– Configure the portable player to accept the system's connection request.</li> <li>– Depending on your phone's compatibility, the music may have to be played from your portable player.</li> </ul>
The "Low battery" message appears.	Using your hands-free phone system for prolonged periods will discharge the phone's battery more quickly.	Recharge your phone battery.

# ALPHABETICAL INDEX

## B

Bands FM/ LW/ MW, [8](#)

Bluetooth®, [8](#), [33](#)

## C

Communication volume, [20](#)

connection Bluetooth®, [16](#), [73](#)

## D

Deleting a phone, [16](#), [73](#)

Disconnect a phone, [18](#), [77](#)

## H

Hands-free phone kit, [8](#), [33](#)

## I

I Traffic, [25](#), [82](#)

## L

Language: change, [25](#), [82](#)

## P

Pairing a phone, [16](#), [73](#)

Pop-up menu, [62](#)

PR, [20](#)

## R

R&Go : calendar function, [97](#)

R&Go : general description, [88](#)

R&Go : multimedia function, [95](#)

R&Go : navigation function, [92](#)

R&Go : setting parameters, [99](#)

R&Go : telephone function, [97](#)

R&Go : vehicle function, [93](#)

## S

Screen: menu, [62](#)

Settings: audio, [25](#), [82](#)

Soft buttons, [62](#)

## T

Time: setting, [25](#), [82](#)

## U

Unpairing a telephone, [16](#), [73](#)

USB : audio source, [8](#), [33](#)

## V

Voice recognition, [101](#)

## W

Wireless charger, [102](#)





RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE / 122-122 BIS, AVENUE DU GENERAL LECLERC 92100 BOULOGNE-BILLANCOURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / [renaultgroup.com](http://renaultgroup.com)

NX1400-7 - 98 45 013 89R - 05/2024 - Edition anglaise



984501389R

# UF